IP Power 9858S / S+Ping
9858T / T+Ping
User Manual

Firmware Version: 1.0B
Date Released: SEP. 2014

Warning: Any changes made to this equipment without permission may cause damages to the device!

IMPORTANT NOTICE

1. IP Power 9858 was designed for indoor use, we carry no responsibility for possible damages caused by outdoor use, especially in the rain.
2. Please use the power adapter provided by the dealer, we carry no responsibility for the possible damage from using power adapters not provided by us .
4. Do not shake the IP Power 9858 in any fashion
5. Please contact the dealer If IP Power 9858 is not working properly.

Copyright © 2014 All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of us.
All trademarks and products mentioned in this document are the properties of us.

Table of Content

WELCOME 5

Introduction 5

Features : 6

Specification 6

Minimum System Requirements 6

Package Contents 7

INTERFACE DESCRIPTION 8

Front View 8

Rear View 9

Fuse replacement 10

SETTING UP YOUR DEVICE 11

Before Starting 11

Hardware Connection 11

Software Installation 11
Installing Software 11
Connection by WiFi- WPS (WiFi Protection Service) 13
Connecting first by LAN –Network cable then setup for WiFi connection 16
Internet Setup 21
Using IP Server 21

WEB INTERFACE 23

Connect to your Device 23
Device name 25
Information : 26
IO Control : 26
Network : 36
Application Settings 47
System Setting 50

CONTROLLING THE DEVICE 59

CGI HTTP Commands 59

Telnet Control 60

FAQ : **61**

Welcome

Introduction

IP Power 9858 is a new generation of the Power Distribution Unit (PDU) & Remote Power Control (RPC) system. Its able to connect to the **WiFi** network plus **WPS** function for easy & quick set up a device to user's wireless home/office network and control in the network

With embedded web server and **HTTPS** protection , 9858 supports higher grade security as working on Internet. User can control power easily and more safely through the web browser on Windows PC or on **Smartphone** like Internet Explorer (IE) , Firefox , Google Chrome , Safari (iOS) and Android system.

9858 allows user to remote control power up to **4 separate** devices on/off via network . As support **SSL & SNMP,** user can use public email like Gmail / Hotmail / Yahoo Mail to get the email as the ON/OFF status change . User can also **control** by **e-mail** without doing port forwarding / port mapping and search the other IP Device in webpage directly **.**

Besides control through web browser , there is **Android Apps** name **"IP Power "** for Android user to control the outlet power turn ON / OFF and quick search device in LAN / WAN Android phone / touch panel . No PC system environment or emergency use for quick response in second.

Not only control manually, 9858 supports **Auto Ping (9258S+Ping & 9258T+.Ping only) , Time Scheduler** which is more suitable for factory / commercial / office / home automation . There is LOG information & send LOG to assign IP (SYSLOG) in webpage.

For system integrator, there are several popular developing tolls like **TelNet** and HTTP Command (SDK) for 2nd development .

The various applications of the 9858 includes:
Power Management, Server Management, Internet Controllable Timer,
System Integration, Remote Power Control in Remote locations …….. etc.

User Friendly . Convenience & Powerful ,

Product Overview

Features :

1. 4 port Remote power controller for power On, Off and Reboot.
2. Web Server built-in design, directly control by web browser – PC & Smartphone Internet Explore (IE) , Firefox , Google Chrome **, Safari - iPhone and Android browser of Smartphone.** (Windows , Android & iOS) .
3. **Android Apps "IP Power " –** free download
   - Controls the outlet power ON/OFF without doing Port Forwarding / Port Mapping
   - Quick search in LAN / WAN (like IPEDIT & IP Service)
4. Support WiFi - Wireless 802.11 N/ B/ G and **WPS** connection
   (WPA-PSK, WPA2-PSK, AES,128-bit WEP,64-bit WEP,TKIP, **WPA2,WPA**)
5. Support **HTTPS , SSL** , TCP/ IP , PPPOE, DHCP, DDNS , SMTP & Telnet.
6. Power Surge protection & FUSE embedded in.
7. **LOG** : Support Log function .
8. Time Schedule - can pre-set a suitable time to turn power on / off automatically .
9. **Auto Ping** for network control & segment management automatically (**(9858S+Ping & 9858T+.Ping only)**
10. **Back Up** for quick setup for multiple devices like Time Schedule, Network Setting.
11. Support public e-mail -- @gmail.com , @yahoo.com , @hotmail. com .....etc.
12. **E-mail Control** & Advice as device boot up.

13. Specific software developed by Aviosys and provided free of charge :
    - SDK Available : HTTP Command & Language
    - IP Power Center - for control multiple Aviosys IP devices in same software
    - CNT software (Cross Network Technology)- allows user eliminate set up work on any Router without port forwarding , simply Plug & Play .

Specification

- Power input : 100V - 240V
- Maximum loading of each output: **8 amp**
- Maximum of Total loading : **8 amp**
- Fuse protection : **10 amp** (with spare fuse in socket)
- Dimensions: 200 x 140 x 50 mm (L x W x H)
- Weight: 990g
- Enclosure – Matel case in Gray color

Minimum System Requirements

Windows PC OS with network capacity.
Browser : Google Chrome , Safari , **IE 9.0 or above .**
RJ45 LAN & Internet HUB / Switch
Internet (for remote access) or Ethernet Network (Internal Network use) with some type of Internet connection, (i.e. ADSL, Cable, Dial up or any other forms of Internet service)

Package Contents

1. 9858 Unit x 1	
2. 9858 Installation CD	
3. Power IN Cable (option)	Please double check the power cable compatible for 10 amp current loading .

Interface Description

Front View

From Left to right :	
Power Status Indicator:	The Power Status #1 ~ #4 Indicator - Green light ON as output power ON.
Reset :	**Set back to default setting by long press** To reset to original manufacture settings, hold down the reset button with a sharpen pin for 5- 6 seconds then RELEASE. There are 3 beeps sound which means reset start and 9858 will be rebooted itself -there is one beep after reboot) and most information go back to default setting (LAN IP).
WPS :	**Enable WPS function by one short click** There is one long beep as enable WPS function. Please refer page #13 for details.
Link:	The Link Indicator shows the WiFi signal transfer status. The light will be ON all the time and flashing while transfer data.
Network: LAN	LAN 10/100 Mbps network
Network :WIFI	**WIFI 802.11N-B/G**

Rear View

From Left to right :

4 Output Power Ports: 9858-T (Upper picture) 9858-S (Down picture)	There are 2 models outlet : * 9858-T : NEMA * 9858-S : IEC320 Connect up to 4 separate devices that will be controlled by the 9858. Ports 1 - 4
1 Input Power Port : 	In this socket, there is power input and Fuse socket . ● The input power sends power to the 9858. ● **Fuse** : To prevent electrical surges from damaging the unit. The 9858 comes with one spare fuse in the unit. **TYPE** : U/C GFE 10A 250V (PF)
1 Power Switch: 	The Power switch turns on the input power.

Fuse replacement

1.) The fuse is located between the power switch and the power input plugs.

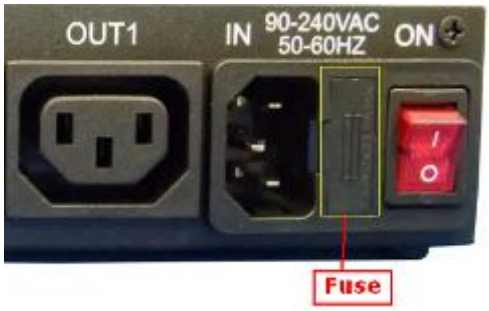

2.) Carefully remove the fuse holder with a flat screwdriver.

3.) The fuse can be purchased from electronic shops.

Specification : U/C GFE 10A 250V (PF)

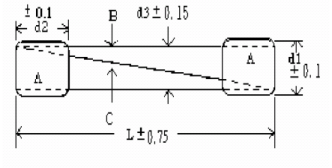

Setting up your device

Before Starting

*Before setting up the device make sure of the following:

1.) All the package contents are all included if anything is missing please contact the dealer where the device was purchased from.
2.) Check the power input cable is working correctly.
3.) Check all cables to make sure there are no problems with it.

Hardware Connection

Please refer following procedure :

1.) Connect the Ethernet cable (RJ45) to the 9858 to your local area network.
2.) Then connect the power cable into the power input port of the 9858.
3.) Connect the device that you would like to control to the output plug on the top of the 9858.
4.) Switching the power source to ON status , this switch is located at the rear of 9858.
5.) After power on for around 45 seconds , there is a short beep sound for 9858 which means the system reboot successfully
6.) Go to page #14 for software installation guide – use IP EDIT to log in the webpage of 9858.

Note: To change the network setting for WiFi connection (if your Router without WPS function) , please go to page # 12 to setup the WiFi connection manually .

Software Installation

The **Media Link - IP Family CD** comes with the device , it has all the necessary software to run and setup the device.

IP Power Software:

IP Edit (Required)
IP Power Center *(For multiple IP Power devices control purpose)

Installing Software

1.) Place the **Media Link-IP Family CD** into the CD/DVD Rom drive.
(The CD will auto run , but if it does not go to the CD/DVD Rom drive and select the "**autorun.html**" file.)

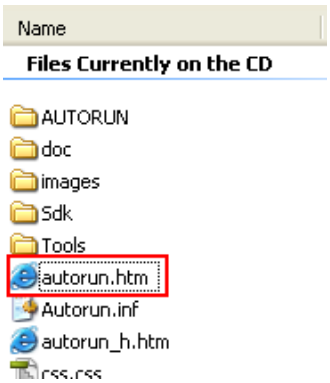

2.) Click on the IP Power Section Bar

3.) Select the IP Power 9858

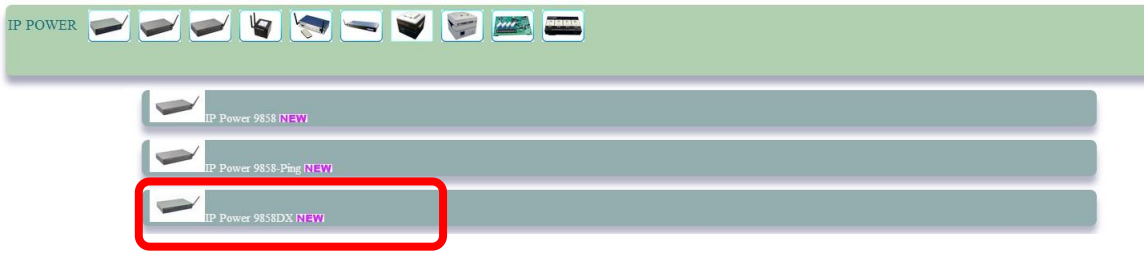

4.) All the available downloads for the 9858 will be shown

`

5.) Download the required software – **IPEdit.exe -** by clicking on the download button.

Then you can select to connect 9858 by LAN or by WAN (WPS)

Connection by WiFi- WPS (WiFi Protection Service)

IP Power 9858 has WPS function , which can assist user setup the WiFi connection from user`s router and IP Power 9858 automatically & fast . Before using WPS function, please check your WiFi router and see if there has WPS function first . There should have a button name “WPS / QCC “ or a sign on the router for user to click easily.

Please refer following steps to setup WiFi –WPS connection

Step 1: Power on the 9858 - only connect power in but do not connect the LAN cable , you will hear one short beep in 40 seconds means 9858 boot successfully

Step 2: Press the “WPS button” of your WiFi Router. (Please check your router WPS function)

Step 3 : One short press on the " WPS " button of 9858 and then there is one long beep sound which means the WPS function of 9858 is enabled .

Step 4: After few seconds , there are 2 short beep Which means WPS connection successfully (If WPS connection fail , there is one long beep sound mean the connection fail. Please go back to step 2 and try again)

WPS Quick procedure :

One short press " WPS " button on 9858 → One Short beep → 5-10 seconds → short 2 beeps → WPS connection successful

Step 5 : Execute IPEDIT.exe . There is WiFi IP address of 9858 shown in IPEDIT.exe as following : Device name in local devices area is " IP POWER (w)

If can't see the IP in the area of Local Devices of IPEDIT.exe. Please disable the Firewall and Anti Virus software temporally and try again .

Step 7 : Double click the IP address and your PC will execute web browser like IE ,Firefox or Google Chrome and there is wizard pop up to enquire the Username and Password .

Username : admin Password : 12345678

Step 8 : For the WiFi connection by WPS way , user can check here :
Network → WiFi Info → Profile list

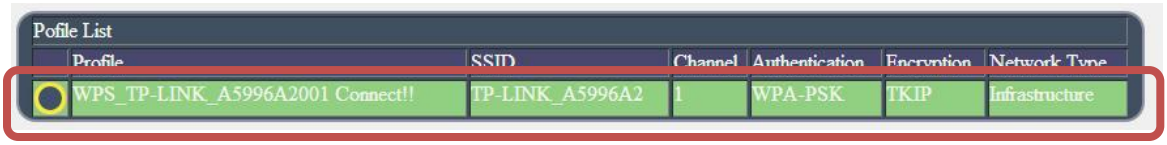

To make this WiFi IP Address can be found on Internet, please arrange 2 settings as log in the 9858 webpage:

1st : Go to " Network → Setting → Default Network Type (gateway) Setting " and change as WiFi for the Default Network Type (gateway) Setting .

2nd : Do the Port Mapping / Port Forwarding in your router (Need to check the router owner's manual).

Connecting first by LAN –Network cable then setup for WiFi connection

Without WPS , user can use LAN network cable to connect 9858 first .

LAN connect by IP Search software " IPEDIT "

IP Edit is a search tool designed to search, configure, or access the IP Power 9858 from a local networked computer.

IP Power 9858 Default Login / Password

Default IP: 192.168.1.168 (While this is no DHCP apparently)
Default Login: admin
Default Password: 12345678

1.) In the local devices section user will see user device show up if connection correctly.

If can't see the IP in the area of Local Devices of IPEDIT.exe. Please disable the Firewall and Anti Virus software temporally and try again.

2.) Select the 9858 device and the device information will pop up on the right.
3.) Check to see that the gateway IP and the IP Address (9858) match user current network.

If not, type in the correct information, then hit the submit button to save changes.

For example:
If user have the following information regarding the 9858 and user network

User PC Network :
Computer IP Address: 192.168.1.122
Gateway: 192.168.**1**.1
Sub Net mask: 255.255.255.0
Port: 80

User 9858 in IPEDIT :
9858 IP Address: 192.168.100.34
Gateway: 192.168.**100**.1
Sub Net mask: 255.255.**0**.0
Port: 80

Since the IP Address of the 9858 is : 192.168.100.34

User will need to make sure that the first 3 segments of user 9858 IP Address must match the first 3 segments of user gateway IP.

First 3 Segment of Gateway Address: 192.168.1.X
So user new IP Address for the 9858 should be: 192.168.1.XXX

New Network Information

9858 IP Address: 192.168.1.26
Gateway Address: 192.168.1.1
Local Computer IP Address: 192.168.1.122
Sub Net mask: 255.255.255.0
Port: 80

4.) Press the " Rescan " button to see if changes have been made.

5.) Double click on the device in the local device section and an IE web browser with the device login will pop up.

6.) Type in the default Login and IP Address to enter the device.

Default Login : admin
Default : 12345678

Notice :
* User can click " REF " in IEPDIT to auto search proper IP setting for 9858.
It will take few minutes to show the suggest wizard.

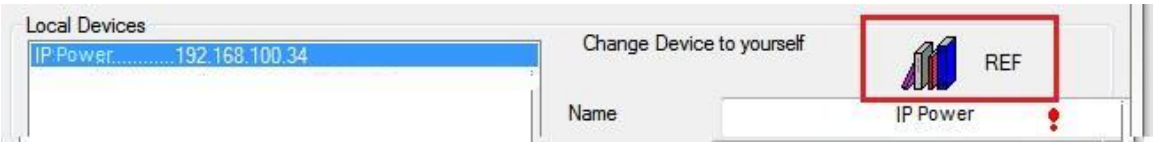

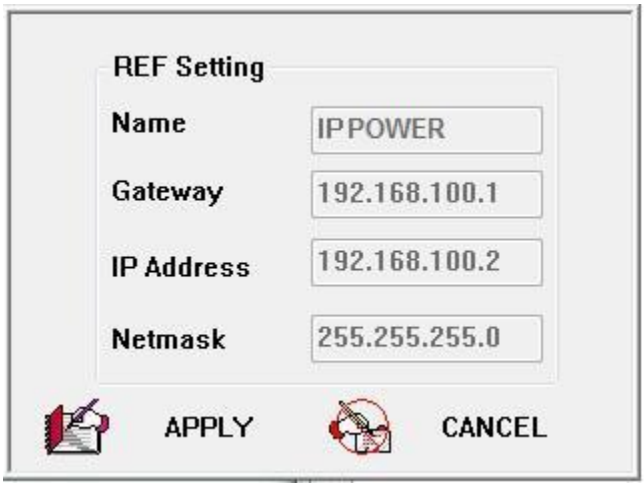

Please click " APPLY " as seeing the suggest wizard , click " yes " to ignore the remind message of IP being used and then type the Username and Password to change the IP setting.

Username : admin
Password : 12345678

Notice :
Segment : The first 9 digits of the IP Address .
EX: The IP of user PC is 192.168.100.122. If the " Local IP Address " at WiFi Info is 192.168.100. x (X can the value of 1~252) , user PC can get into the webpage of 9858 .

Please press "Rescan " to search the router near by again if can not see user router in the list.

WiFi Connection after log in webpage by LAN :

After log in 9858 , to connect by WiFi , please go to Network → WiFi Survey to add the WiFi router in to 9858 WiFi profile .

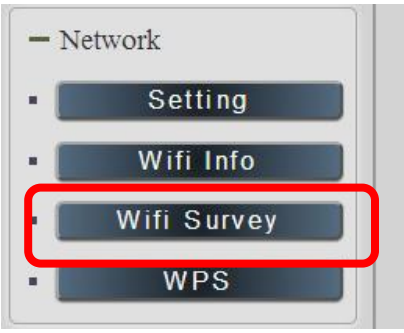

1) As go to WiFi Survey page, there is a list for the available WiFi router near 9858 . Please select the one plan to use and click " Add Profile "

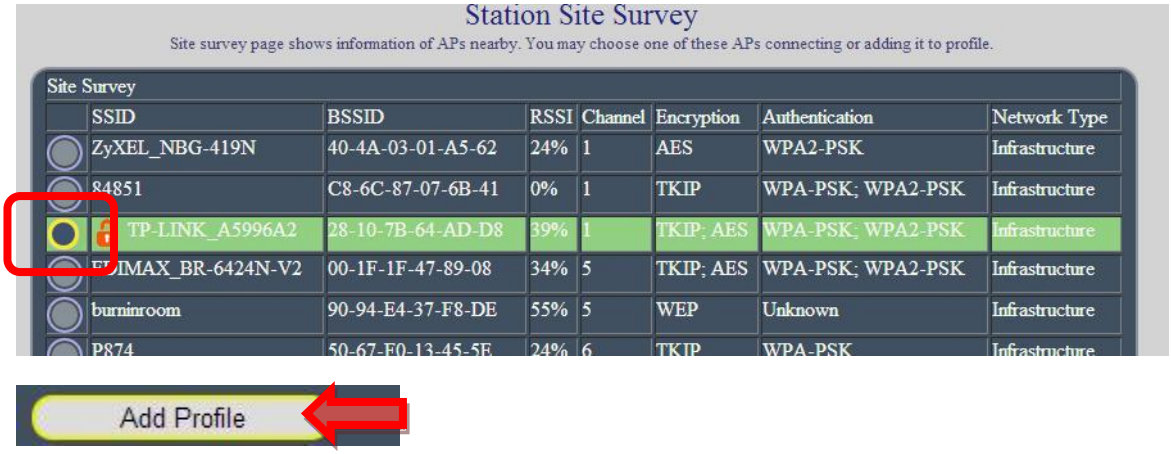
Station Site Survey
Site survey page shows information of APs nearby. You may choose one of these APs connecting or adding it to profile.
Site Survey
SSID BSSID RSSI Channel Encryption Authentication Network Type
ZyXEL_NBG-419N 40-4A-03-01-A5-62 24% 1 AES WPA2-PSK Infrastructure
84851 C8-6C-87-07-6B-41 0% 1 TKIP WPA-PSK; WPA2-PSK Infrastructure
TP-LINK_A5996A2 28-10-7B-64-AD-D8 39% 1 TKIP; AES WPA-PSK; WPA2-PSK Infrastructure
IMAX_BR-6424N-V2 00-1F-1F-47-89-08 34% 5 TKIP; AES WPA-PSK; WPA2-PSK Infrastructure
burninroom 90-94-E4-37-F8-DE 55% 5 WEP Unknown Infrastructure
P874 50-67-F0-13-45-5E 24% 6 TKIP WPA-PSK Infrastructure

9858 will get most information from user's router automatically and user just need to type the password to connect with the WiFi router then click " Apply "

Then user can get the router information in " Profile list " section as following pictures

Select the router and press “Activate “

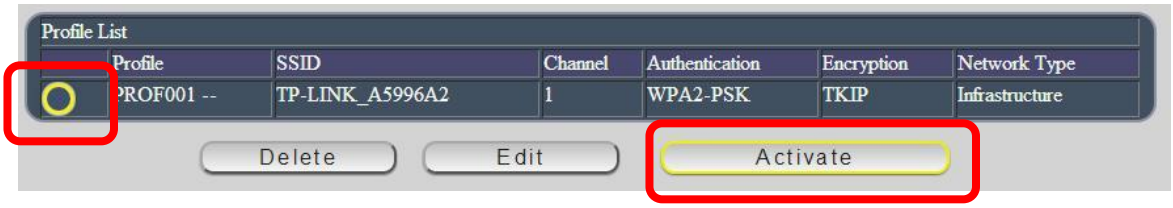

As connection successful , the page will turn to “WiFi Information “ and show the information .

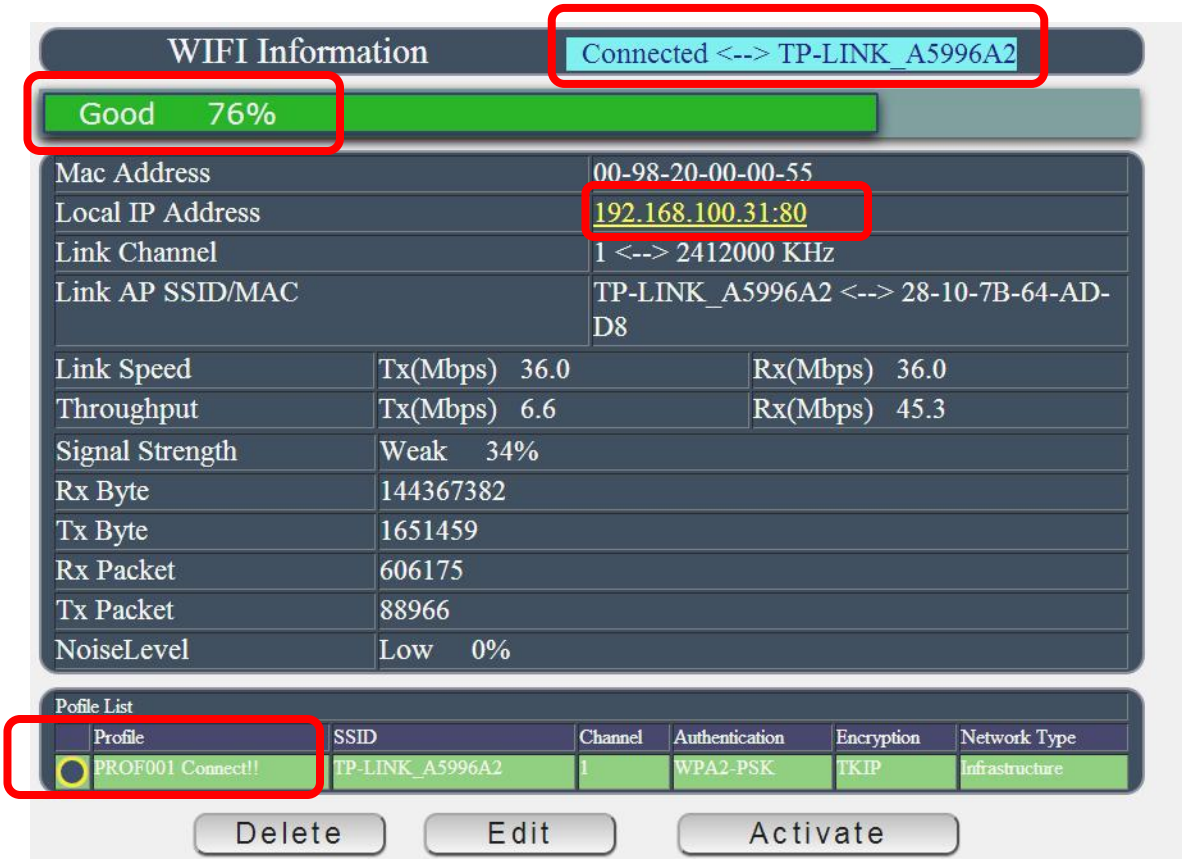

Now user can see the new WiFi IP address which can be found by software IP Edit.
Then user can remove the LAN cable and re-log in the 9858 by IP Edit re-search of above WiFi IP address.

Internet Setup

To connect the IP Power 9858 on Internet, there are two ways

- Setup Port Mapping / Port Forwarding in your router. Please check your Router owner's manual .
- Use our own software " IP Power Center " : Please refer to the "IP Power Center " manual in the CD

Using IP Server

IP Server is a function which allows user to search for the device easily without having to remember long complicated IP address. Instead, if user know the device's name of user IP Power device and user can easily find IP Address with IP Service. ***To log in the webpage of 9858 on Internet , user still need to do the "Port Forwarding " in own router.***

Before using "IP Server " , please change the device name of user 9858 to avoid similar name in Host Server.

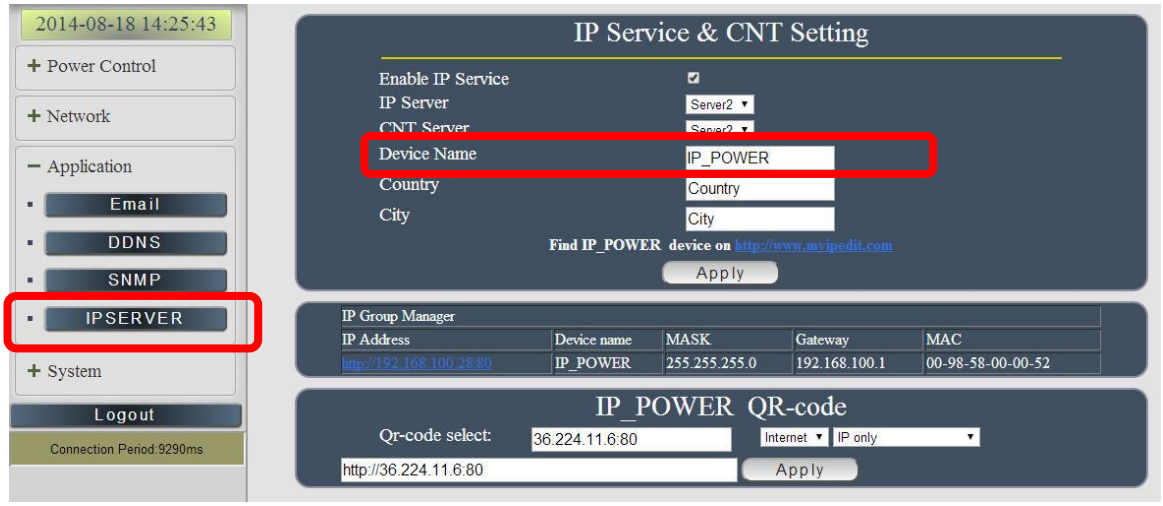

1.) Open IP Edit and select the server that user's 9858 is designated to.

2.) Hit the Green Connect button on the top of IP Edit.

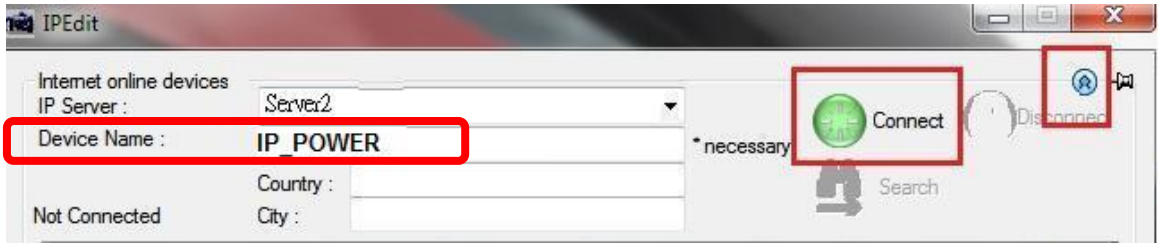

3.) Then type in the 9858 Name that user have selected for the device and press the Search button.

4.) Find user device and double click on the screen and a IE window will pop up connecting to user device. **User device must be Port Forwarded for the login screen to appear.*

EX: The 9858 device name as IP_POWER , and user can search the device easily :

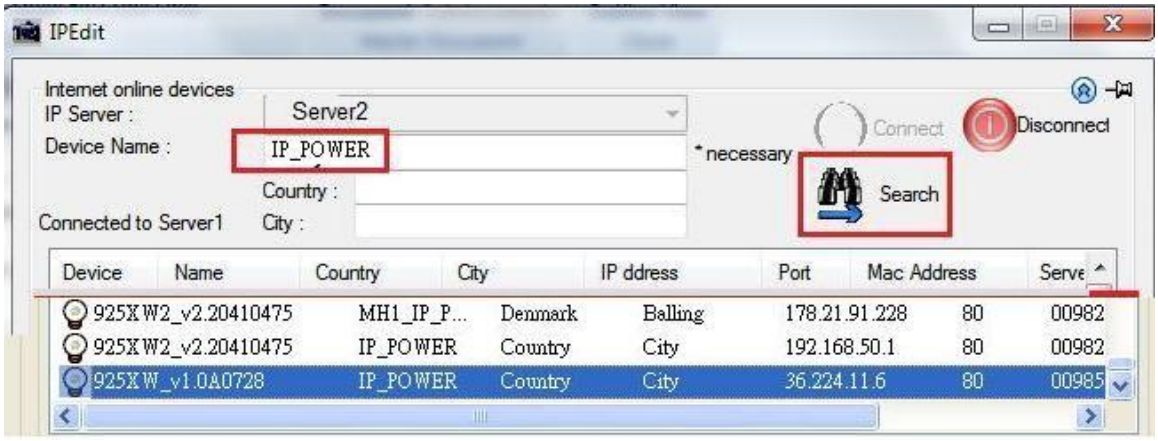

5.) After user have connected to user device, type in the Login and Password for user device

Web Interface

Connect to your Device

Once the 9858 has been setup correctly, log into the device.

First Option

1.) Go to IP Edit to find the device that is being used
2.) Double click on the device linked and an IE window will appear with the loading screen

Second Option

1.) Open Internet Explorer type in the IP Address of the device followed by the : sign.
For example: http:192.168.122.188:9258
192.168.122.188 – IP Address

2.) Once you have typed in the IP address of the 9858 and it is ready to use.

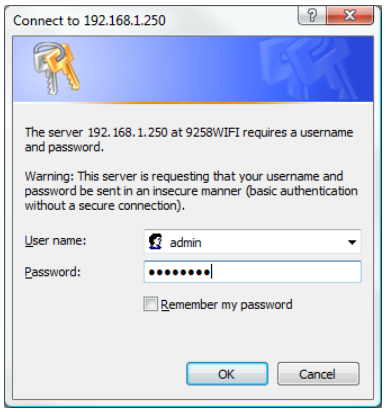
Connect to 192.168.1.250
The server 192.168.1.250 at 9258WIFI requires a username and password.
Warning: This server is requesting that your username and password be sent in an insecure manner (basic authentication without a secure connection).
User name:
admin
Password:
Remember my password
OK
Cancel

The default Username and Password for the 9858

Username : admin
Password: 12345678

The Control Console

The left side Menu of the Web Interface control the functionality and setup of the IP Power 9858.

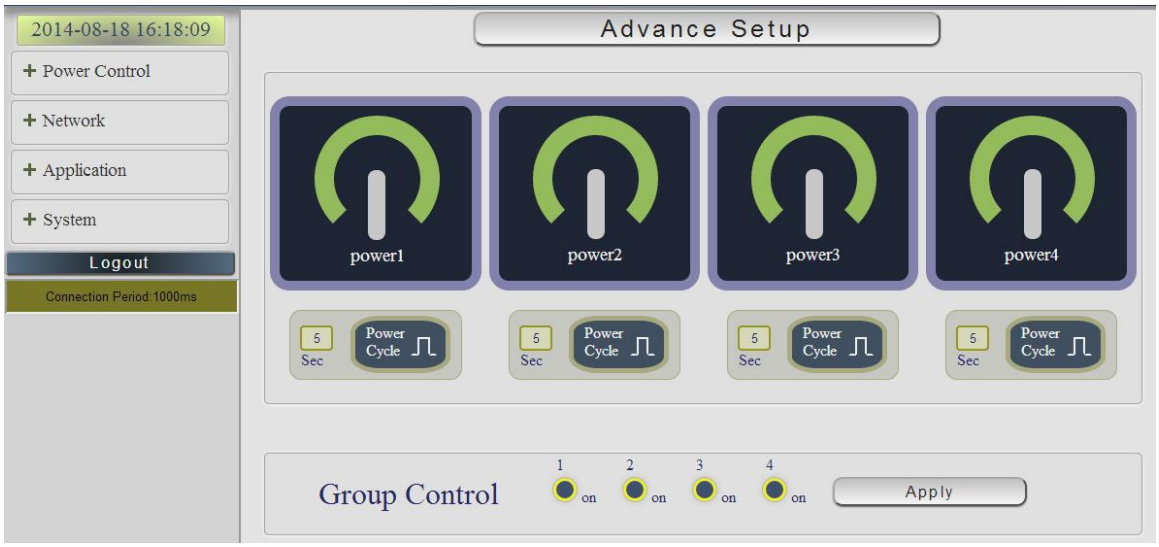

The IP Power 9858 Console consists of six main sections which will be explained in details below.

- **Device name & Hide or Display the left setting column (** for smart phone control)
- **Power Control :** Controls , Schedule & Ping.
  (Ping function is for 9858S+Ping & 9858T+Ping modle only)
- **Network :** Setting , WiFi Info , WiFi Survey & WPS
- **Application :** Email , DDNS & IP Server
- **System :** Management, Information, SysLog & Firmware
- **Logout**
- **Connection Period**

Device name

This section show the device name

You can change the device name here : Application → IP Server → Device name
Change name " IP POWER 9858 " as "Enjoy 9858 "

Please change the name in English only and do not use symbol like !@#$%^&*()_+

Device Name & Display / Hide the left setting section :

For Smartphone user to control 9858 easily , user can select to show or to hide the left control section by pressing the blue area near device name for Smartphone control :

- With left control section :

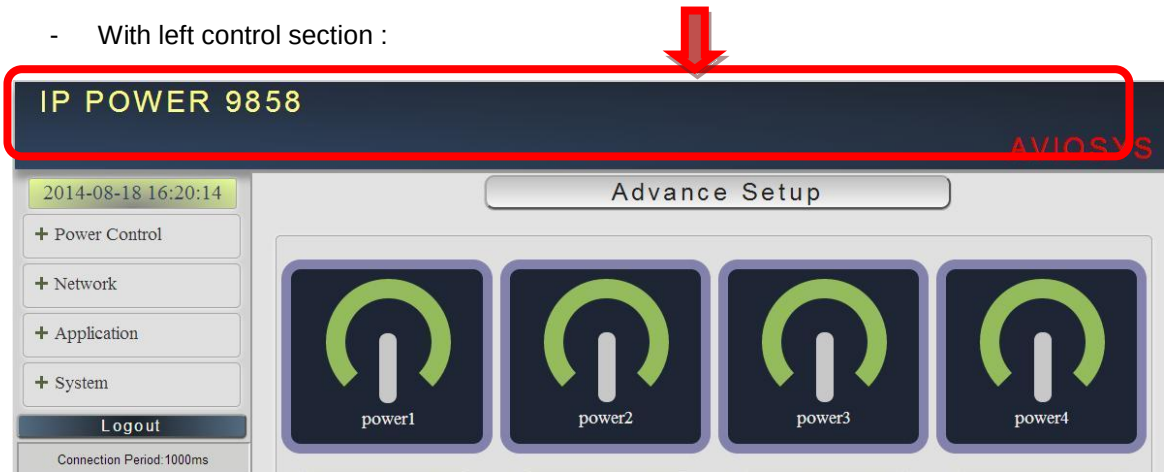

Without left control section :

Information :

In this section, it shows Time at Year – Month – Date Hours : Minutes : Seconds .

To setup the Time , Please go to " System → Management → NTP Settings " , please press "Apply" to save the new setting .

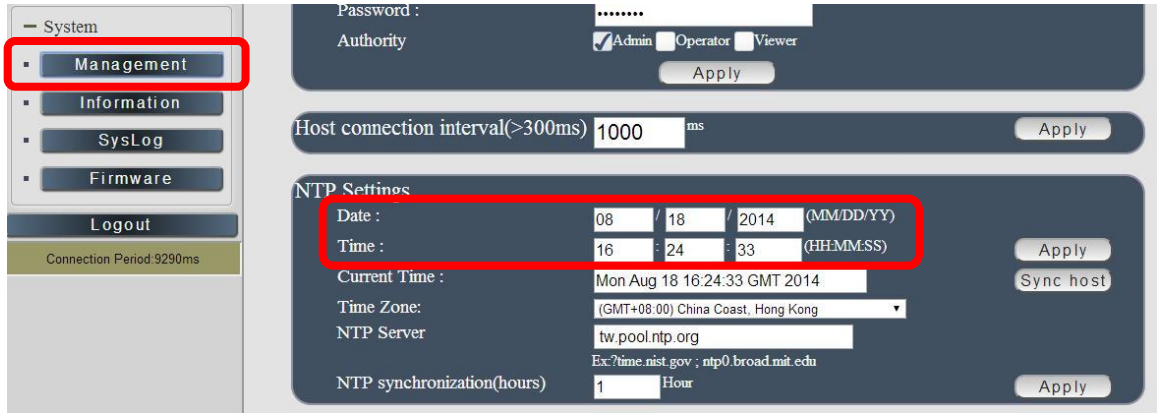

IO Control :

The IO Control Section allows you to directly / automatically control the outlets of the 9858 as well as schedule Daily, Weekly, and Monthly power cycles.

There are 2- 3 sections : Control , Schedule , Ping
(Ping is for 9858S+Ping & 9858T+Ping modle only)

9858S / 9858T

9858S+Ping / 9858T+Ping

Control

There are 2 setting pages in this Section. One is " Power Control " and another one is "Advance Setup "

A. Power Control :

User can do the following 3 basic operation in this page :

1. Manual control each port ON or OFF directly by pressing the power sign.

2 Power Cycle : This section allow user to setup the output Reset action.
The cycle time from OFF to ON can be set from 1 to 99 seconds

- Original Status as ON : Press "Apply" then the outlet will turn OFF → ON .
- Original Status as OFF : Press "Apply" then the outlet will turn ON → OFF →ON.

3 Group Setting : User can control more than one outlet by press the right side "Apply " button . For safety concern , each port of 9858 will turn ON or OFF one after one .

For example : The following pictures means that Power #1 & #4 is ON , Power #2 & #3 is OFF

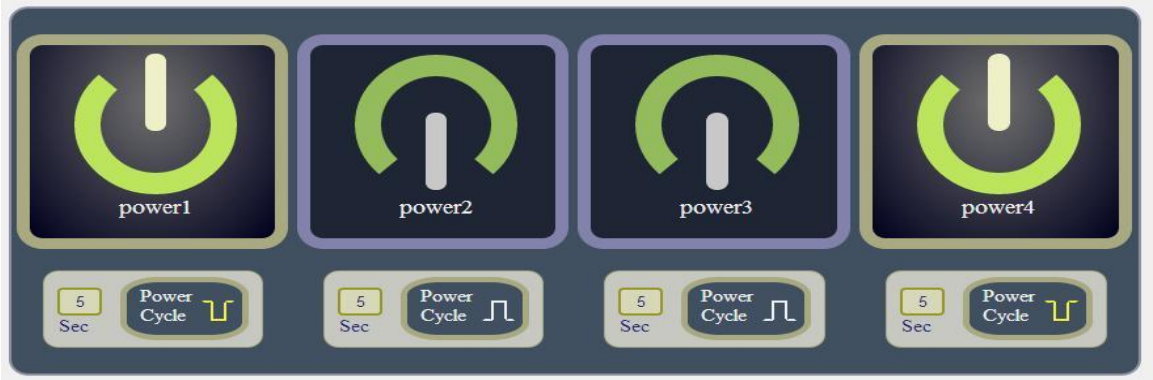

The following 3 pictures shows that after press the power cycle with 5 seconds setting , the outlet " Power1 " will turn off for 5 seconds , then turn ON later . The power cycle action will execute after press the " Power Cycle " button .

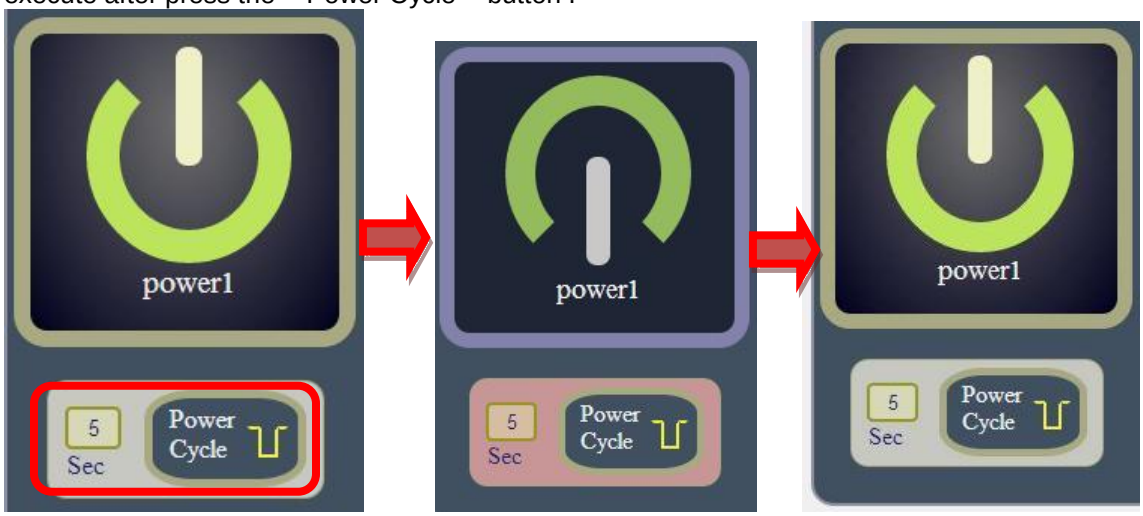

B. Advance Setup :

User can do the following 2 advance operation in this page :

- Alarm Setting :

- E-mail Alarm Setting :

Use can enable /disable the e-mail alarm here .The e-mail alarm section allows 9858 to notify user by following situation :

- Receive E-mail with IP information & MAC Address as 9858 device boot up.
- Receive E-mail as ON/OFF status change in each output .

To get E-mail about of power status , please go to " Application → E-mail.

- Beep Alarm Setting:
  User can setup the operation beep (short time beep) sound here.

- Default Power Status : The control section allow user to set the power status on ON or OFF or LAST when the device power Rebooted . The output will be same status as choose LAST before the device power turn off. To save the setting here , please click "Apply " button .

- Outlet Name setting

User can name each power by click the name above the power button
The number of character is max. 12 characters and Please change the name in English only and do not use symbol like !@#$%^&*()_+

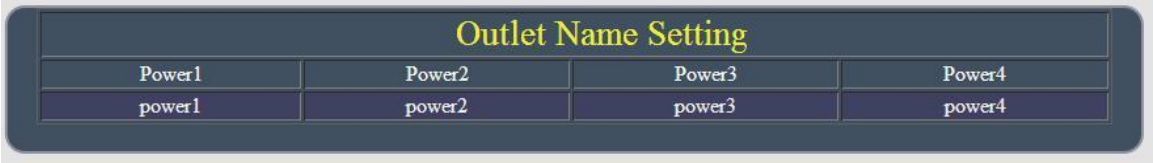

Note : Please change the name in English only and do not use symbol like !@#$%^&*()_+

Schedule

In this section , user can see the setting schedule list first up to **4** rules. To setup each schedule , please press " Schedule Setting " , then user can get the " Schedule List " page as following :

Please click the button to switch between " Schedule Setting " & " Schedule list " :

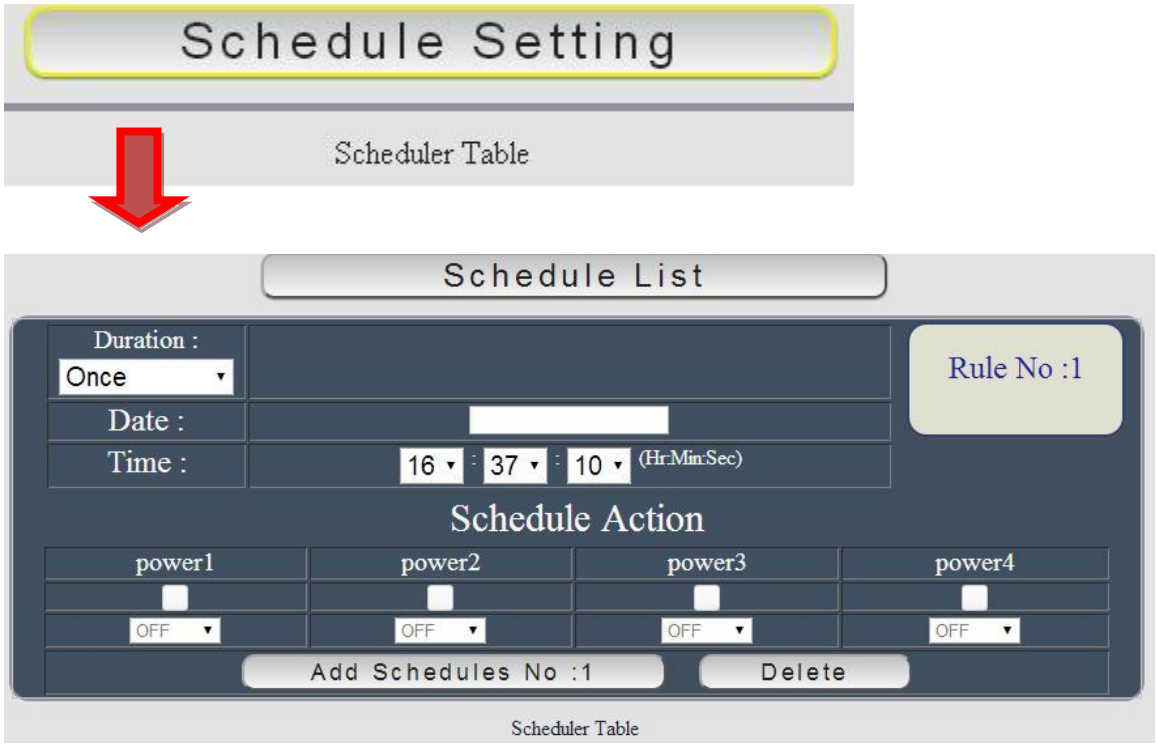

The schedule allows you to control the power outlet or turn ON / OFF/ RESET at assigned time

Adding a Scheduled Event

1. Select the Action Duration :

   There are 3 setting - Once , Every Day . Every Week

2. Select a Specific Date Range where the device will repeat the desired actions during the time specified.

3. Select the Time Period.

4. Choose the Action : Enable power # by clicking in the small square to mark " v " , and select one from the power action of OFF/ON/RESET as you need. .

Once the scheduler has been Set Up , hit the " ADD No.:X Power Schedule " button and you will see your setting located on the bottom of the Action section .

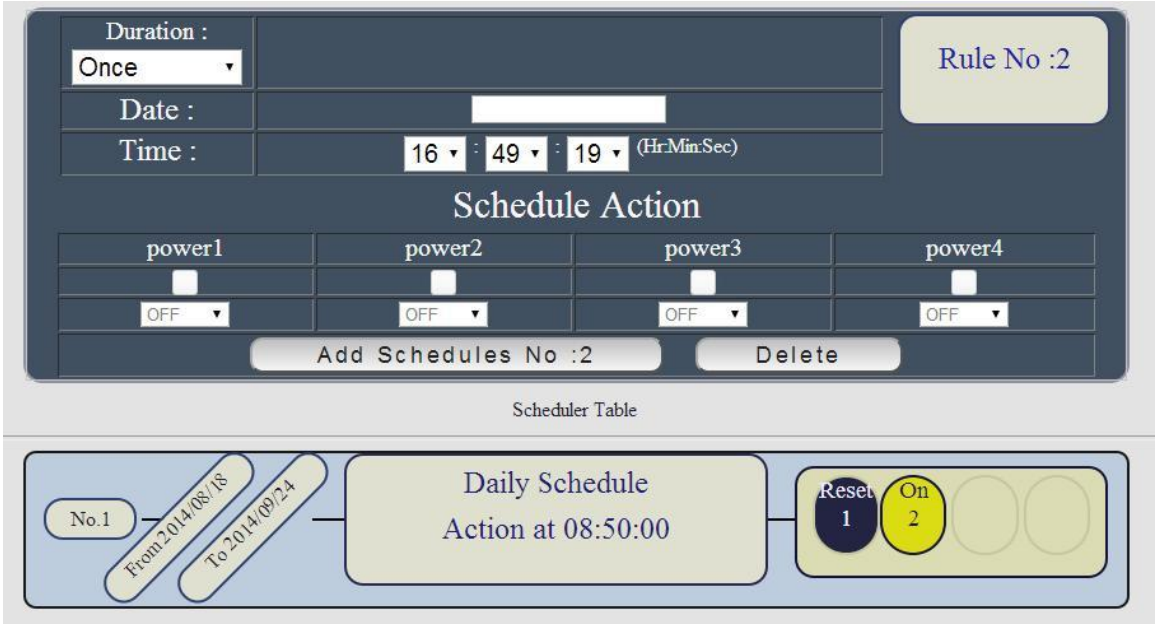

Edit a Schedule Event :

Step1 : Please select the Rule you want to edit in Scheduler Table. Then the button "ADD No.:X Power Schedule " will switch to "Edit No.:X Power Schedule "
Step2 : :Change the setting like Duration , Date , Time and Action.
Step3 : Press " EDIT NO. X Power Schedules " button to confirm the setting and you will see the page refresh and new setting display in Scheduler list

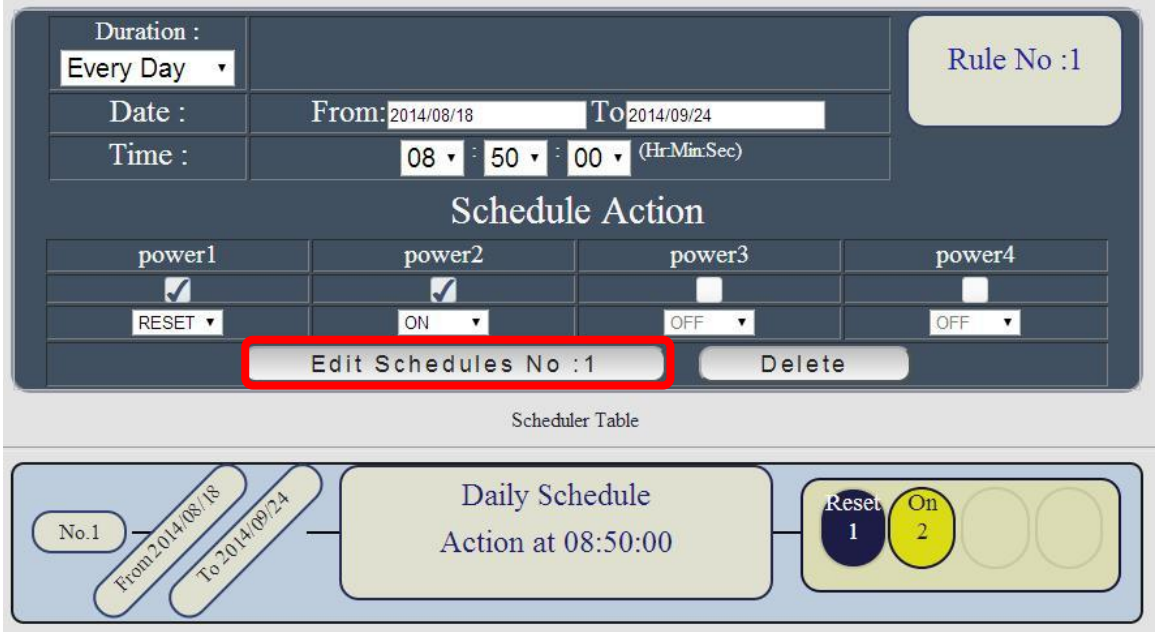

Delete - Click " Delete " button to remove a rule form the list .

Ping

Ping function is for 9858S+Ping & 9858T+Ping modle only.

The Ping function allows the device to Ping an IP Address automatically to act as a watchdog to make sure the device getting Ping and working properly. Please Click the button to switch between " Ping Setting " & " Ping List " . User can hide the setting section by press " Ping List " **There are 4 rules for Ping .**

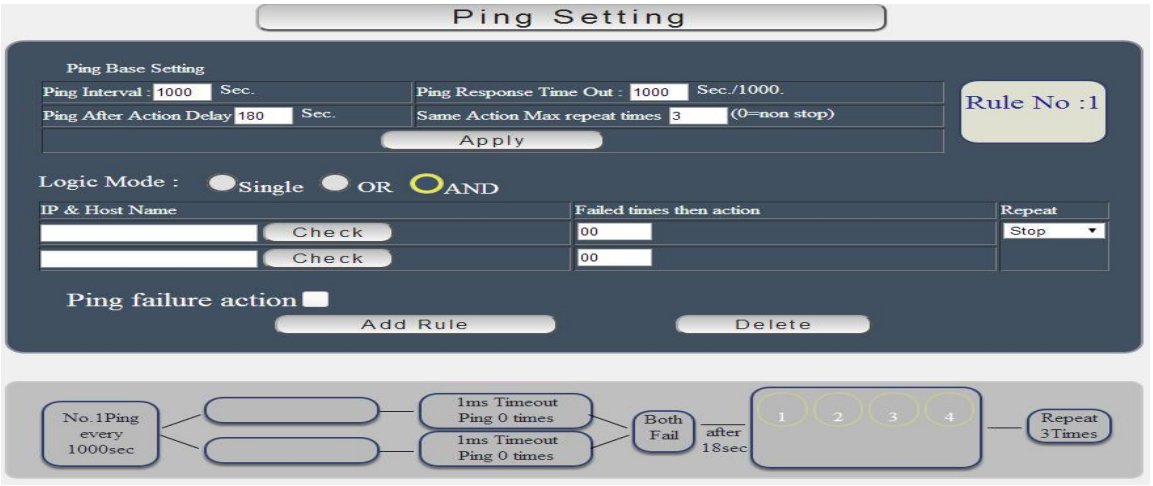

There are 3 sections of the setting area ：

1. Setting Rule Numbers ：

User can click to select different rules numbers at the right side button “ Rule No: X “ as following pictures . There is 4 rules available.

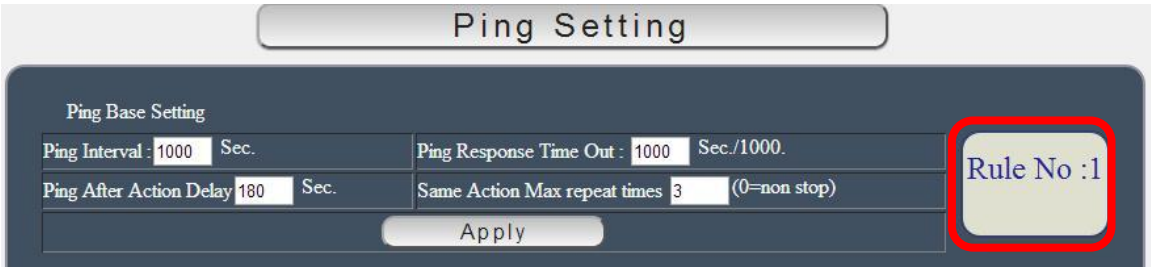
Ping Setting
Ping Base Setting
Ping Interval : 1000 Sec.
Ping Response Time Out : 1000 Sec./1000.
Ping After Action Delay 180 Sec.
Same Action Max repeat times 3 (0=non stop)
Apply
Rule No :1

2. Ping Base Setting :

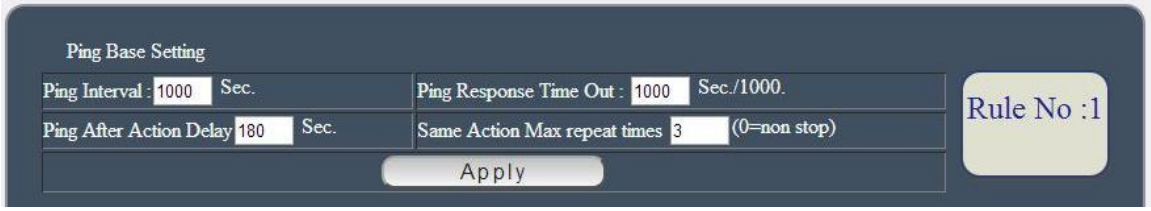
Ping Base Setting
Ping Interval : 1000 Sec.
Ping Response Time Out : 1000 Sec./1000.
Ping After Action Delay 180 Sec.
Same Action Max repeat times 3 (0=non stop)
Apply
Rule No :1

- Ping Interval (Sec): The number of seconds between each ping .
- Ping respond Time Out (Sec. / 1000 = Milliseconds): The number of milliseconds of the device will wait for a response from the Pinged device if no ping is detected within this time it will be considered a Ping failure.

- Ping After Action Delay XXXXXX Sec.：After ping finished , do the action after setting second
- Same Action max. repeat Times：Set the times to execute the Ping Failure action
  Set 0 means action non stop - Keep action & no limit times.

As finish setting , please click “ Apply “ to save the setting in this area , the webpage will refresh and user can see the final setting result. Ten set up different rules for different port .

3. Other Setting :

The setting here is for each rule .

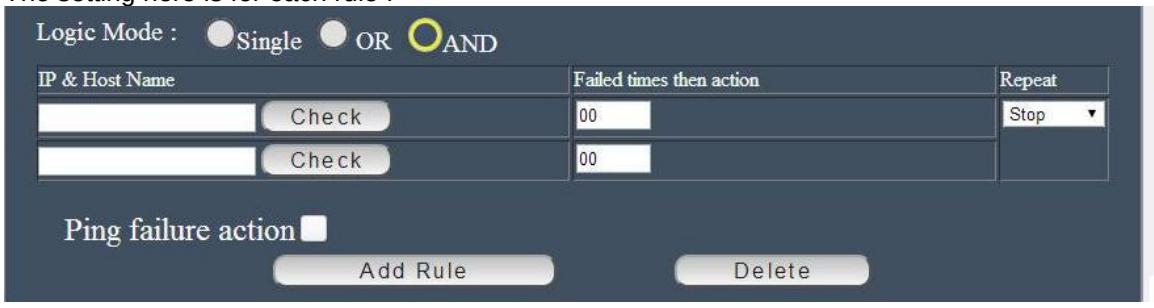

- Logic Model :

  User can select the action activate by one / two IP Host failure or either one fail
  - Single : Execute Action by one IP Host failure .
  - OR : Execute Action by either one IP Host failure as setting 2 pcs IP Host
  - And : Execute Action by both IP Host failure as setting 2 pcs IP Host

Single : 9858 will Ping one IP address. As the IP fail times reach to the setting times . Action (ON/OFF/RESET) will be activated .

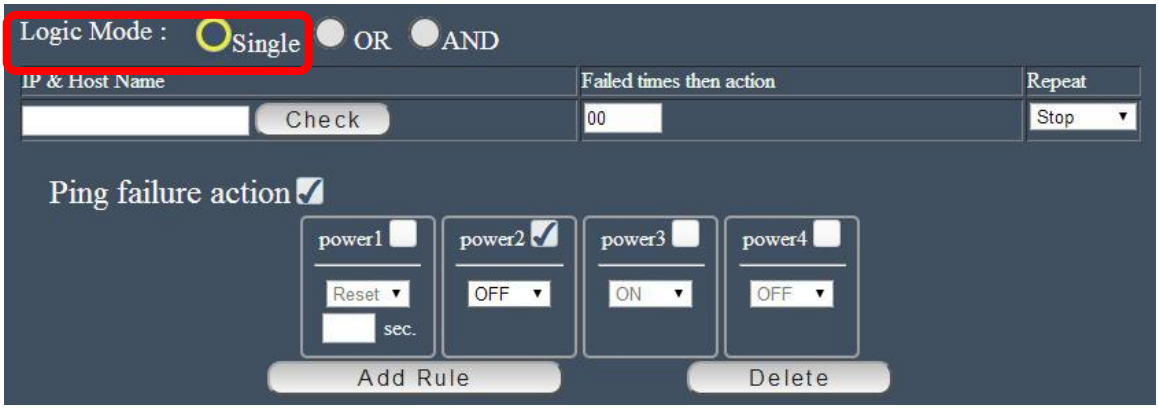

OR : 9858 will Ping 2 IP address. Either one IP fail times reach to the setting times. Action (ON/OFF/RESET) will be activated .

AND : 9858 will Ping 2 IP address. Both IP fail reach to the setting times. Action (ON/OFF/RESET) will be activated.

- IP & Host Name : Input the IP Address (ex: 122.116.123.138) or Host - web address (ex: www.google.com) user would like to Ping.
  User can use the " **ping test** " bottom to check the address valid or not

- Failed times then action : Setup the ping failure times for 9858 to execute the setup ON/OFF / Reset action of setting .

- Repeat : After the ON/OFF/Reset action , user can setup the Ping action to keep ping (Continue) or to Stop Ping (Stop) .

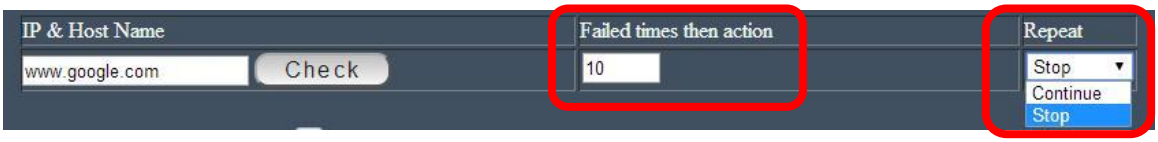

- Enable Ping function : In the selected Rules number , please select the outlet number power to activate as ping fails and then press " Apply Rule Action " button to confirm the setting .

- Ping failure action :

  When the number of Ping Failures times have been reached. The device can be set to " ON , OFF or Reset " function

  Reset: Can set up the time gap from OFF to ON. The " Sec " section is for action as Reset only.

The setting times rage is 1 to 99 sec. Select the number of Ping Failures that user prefer to do before the action is activated.

EX: Result of setting

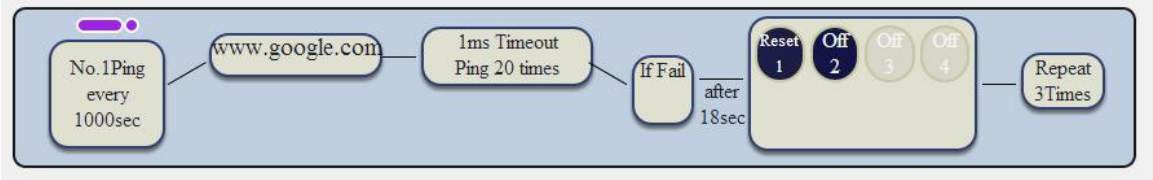

Network :

The Network Section allows user to setup LAN –Ethernet or WiFi settings and WPS setting .

There are 4 sections : Setting , WiFi Info , WiFi Survey and WPS .

Setting :

This Setting section shows the network status of 9858. **Please select one connect Icon – either LAN or WiFi connection but not both connected after setting completed** .

There is 4 different portions in this section :

- Network type : LAN (Ethernet) / WiFi
- LAN (Ethernet) Settings
- WiFi Network settings
- Port Setting : use can set port range as 80 ~65535

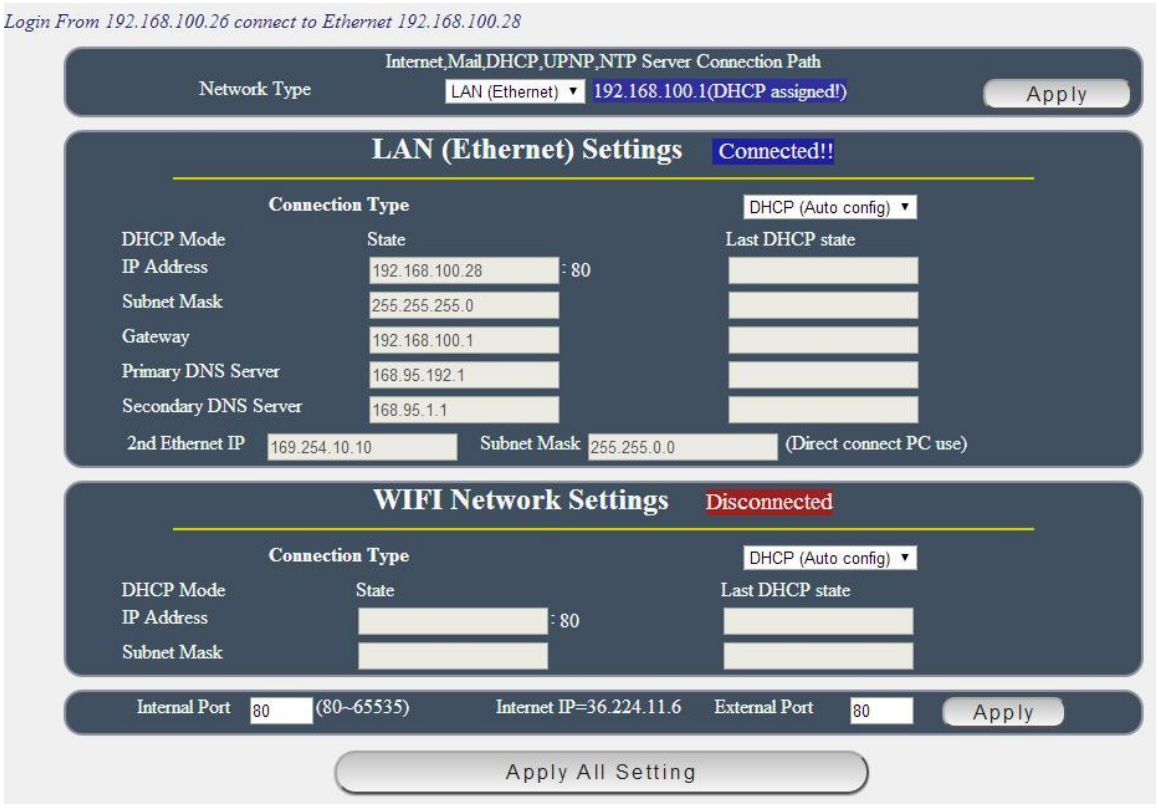

- ***Network Type :***

The NETWORK TYPE is the door for Internet connection , Email , DHCP UPNP NET Server . Please select correct type of LAN or WAN for the user to log in 9858 form Internet and use above functions .

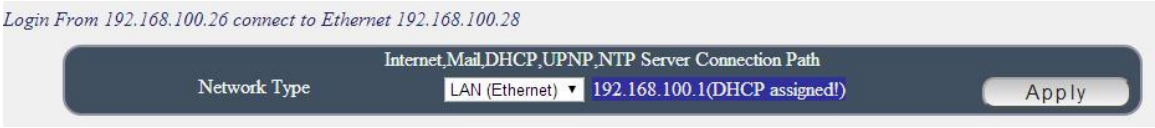

Notice :

Under DHCP mode - either select LAN or WiFi connection, 9858 will get the Network type (Gateway) information automatically.

But if under Static mode , please do fill up the correct Network type (gateway) .

As choose WiFi connection , the gateway of LAN will be empty automatically.

- ***LAN (Ethernet) Settings :***

The network status is connected by cable . The way of connection way are:
Static IP / DHCP / PPPoE

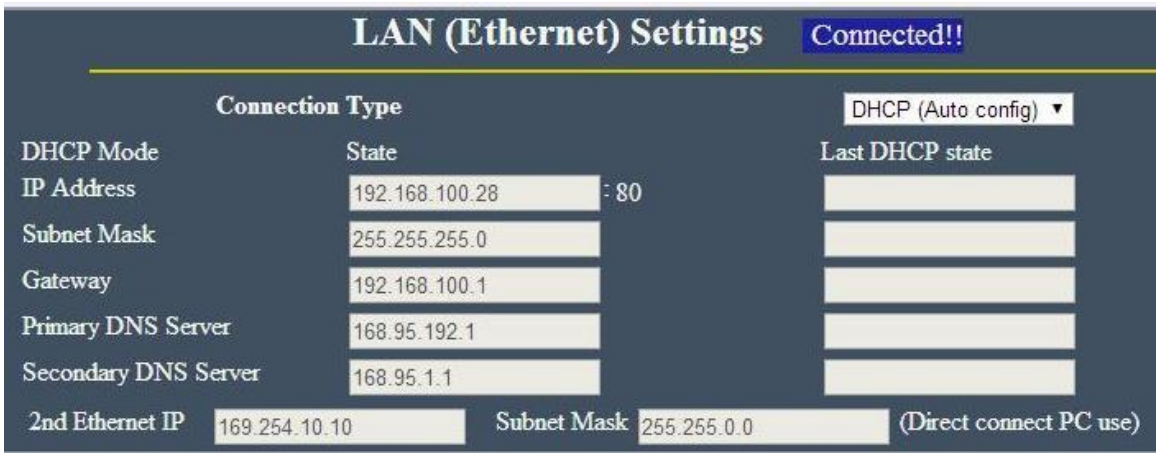

In connection type , there are 3 different way for LAN - Ethernet Connection .

A. STATIC (fixed IP) :

Setup IP address manually. This allows the 9858 to obtain an IP Address automatically from user`s server connected to Internet. Recommended for users who need to control through Internet. **Please do fill up the correct gateway for login from Internet .**

B. DHCP Mode :

Obtain IP address via DHCP model . This allows the 9858 to obtain an IP Address automatically from user`s server connected to Internet. Recommended for non advance users.
User can only revise the Host Name under DHCP mode. This is also the default setting for fast LAN connection solution.

As the IP from DHCP Service of user`s router will be changed by router . 9858 will remember last IP of 9858 assigned by user`s router in “Last DHCP state “ for information

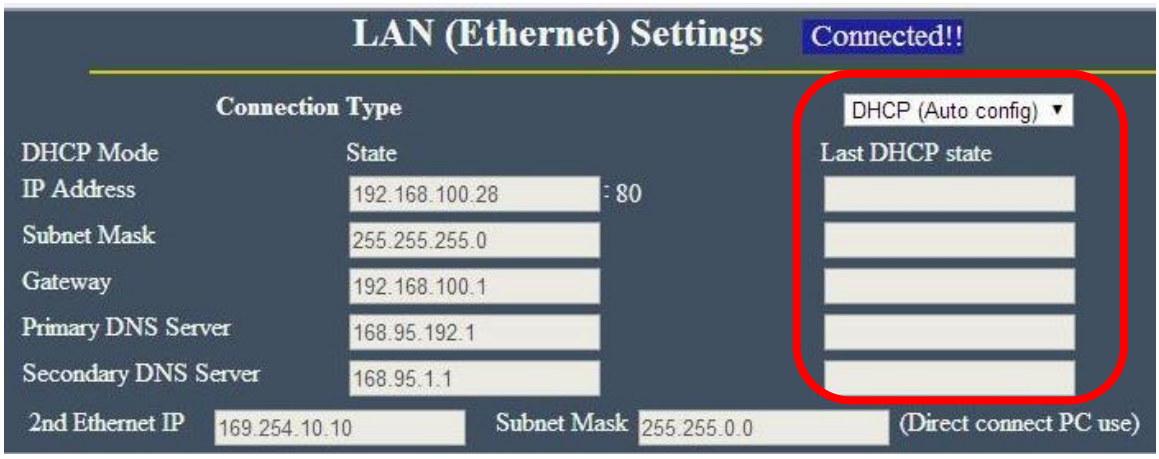

C. PPPoE :

Only support for Ethernet connection .
Obtain IP address via Internet Service Provider (ISP) through PPPoE service (The IP address can be reach on Internet but not fixed) . User need to provide the Username & Password ISP supply to get connection on Internet.

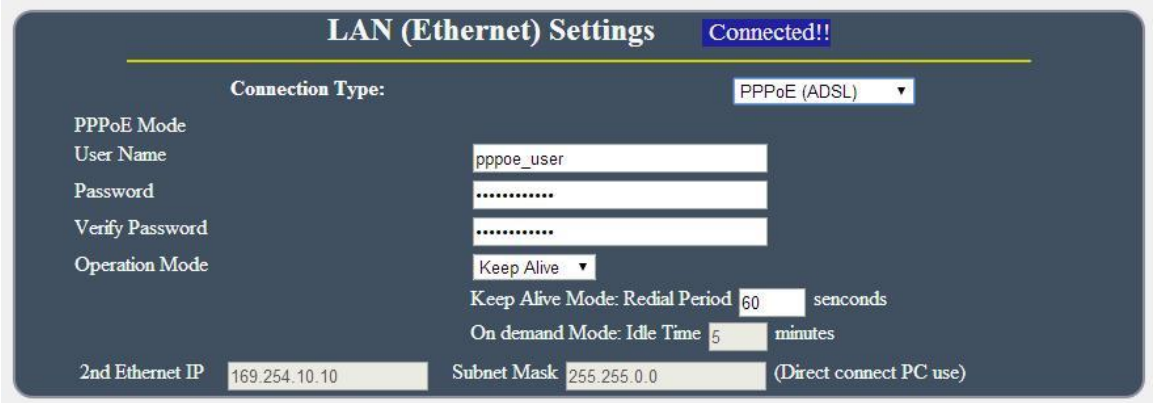

- User Name : type in the format ISP supply for PPPoE connection
- Password : type in the format ISP supply for PPPoE connection
- Verify Password : Re-type the password
- Operation Mode : There are 3 mode for PPPoE connection
- Keep Alive : Auto connection in the setting time as disconnect.
- On Demand : Auto connection after setting idle time as disconnect .
- **2nd Ethernet IP:** The IP 169.254.10.10 here is fixed and can not be changed . This IP is for user to connect to PC directly.

Notice :

Without network connection , the IP address of users Windows PC is 169.254.10.xxx . So the IP is for user to connect 9858 to PC directly and user do not need to change the IP of WIN PC connect to 9858 by network cable.



- ***WiFi Network Settings :***

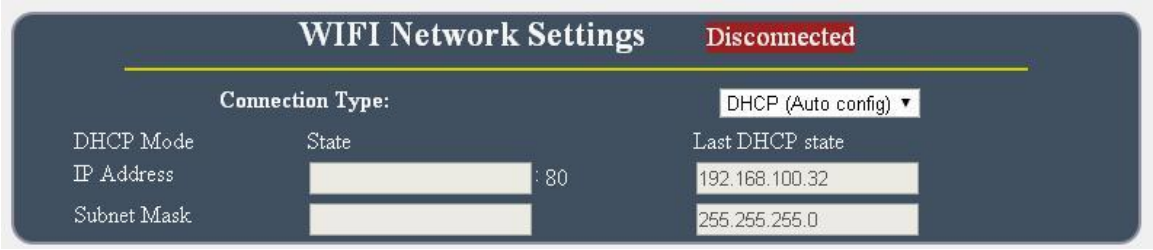

The WIFI network connection support : Static IP / DHCP

A. STATIC (fixed IP) :

Setup IP address manually. This allows the 9858 to obtain an IP Address automatically from user`s server connected to Internet . Recommended for users need to control through Internet. **Please do fill up the correct gateway for login from Internet .**

B. DHCP Mode :

Obtain IP address via DHCP model . This allows the 9858 to obtain an IP Address automatically from user`s server connected to Internet. Recommended for non advance users.
User can only revise the Host Name under DHCP mode. This is also the default setting for fast LAN connection solution.

As the IP from DHCP Service of user`s router will be changed by router . 9858 will remember last IP of 9858 assigned by user`s router in “Last DHCP state “ for information

- ***Port***

User can change the port number of 9858 here.

A. The port setting at left side is PORT of LAN / WAN .
If your IP (WAN / LAN) is 192.168.100.123 and port as 80



B. 9858 will check your Internet real IP of this connection, and you can separate the port for LAN connection or for Internet connection .
The port setting at right side is Internet connection - log in 9858 webpage from internet.

As arrange “ Port Forwarding” for internet login in user`s router , please do change Port for internet connection here .



WiFi Info :

There are 2 sections in this page . One is WiFi information and another one is Profile list .

After WiFi connection successfully , 9858 will turn to this page and show the WiFi information . Please refer page 19 to setup the WiFi connection. User can add different router in profile list for 9858 to switch. User can get the Router name , signal strength , MAC address , WiFi IP address , Channel and most WiFi connection information in this section .

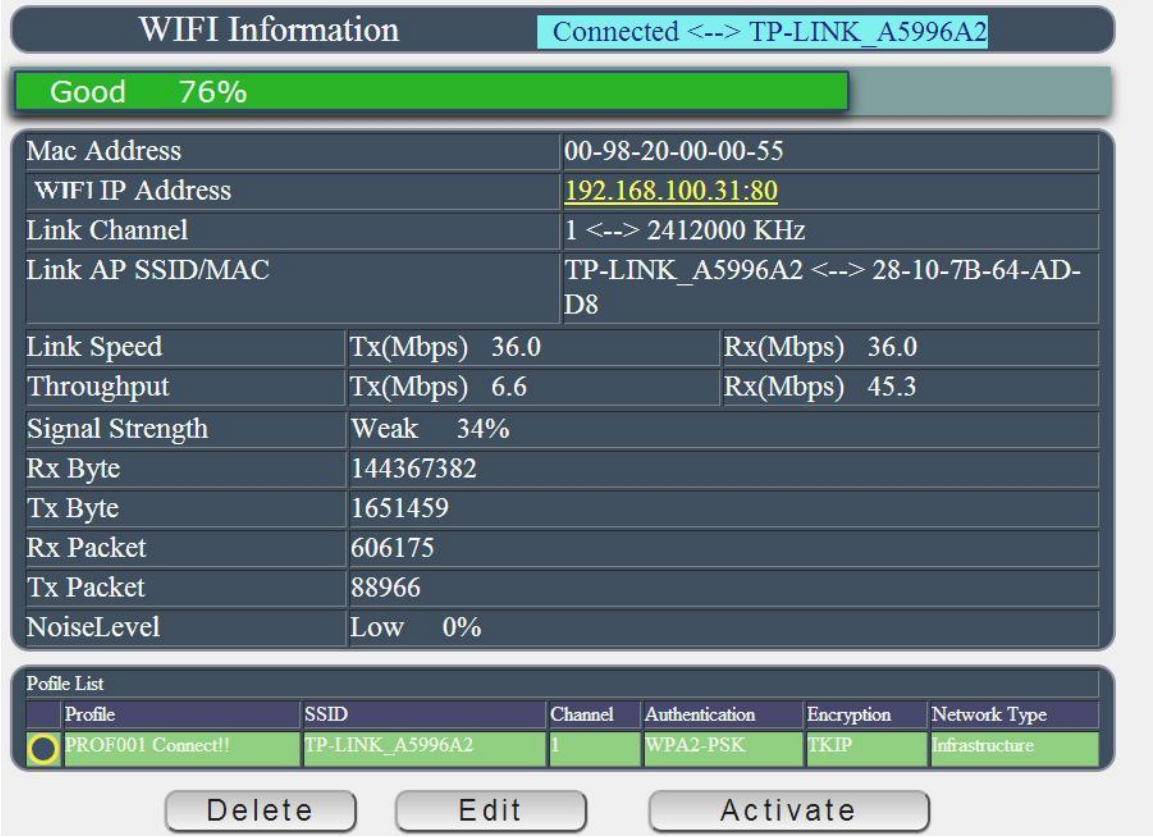

WiFi Information Section :

There are WIFi Information : connect to the router , Single strength , MAC & IP Address , Local IP Address : It shows the IP of WiFi connection (Allocate Supply by WiFi Router) Connection Status : It show the router name of 9858 is connected.

If need to add other WiFi Router into profile list , please arrange the WiFi connection setup , go to " WiFi Site Survey " , but user can change the profile list to switch the WiFi Router you prefer to use.

As the connection is successful , there will be is Yellow circle mark in first column of the profile Router. User can also edit / delete / active the router here In profile list section . ,
If need to add other WiFi Router into profile list , please select the router in " WiFi Survey " page and add into profile (with correct password) . Then user can change the profile list to switch the WiFi Router user would like to use.

WiFi Survey

This section is to arrange WiFi connection. 9858 will auto search the WiFi Router nearby and also their information as boot up , 9858 user can just select the router and type the password to connect with your WiFi router and make connection easily.

Station Site Survey
Site survey page shows information of APs nearby. You may choose one of these APs connecting or adding it to profile.
Site Survey
SSID BSSID RSSI Channel Encryption Authentication Network Type
84851 C8-6C-87-07-6B-41 34% 1 TKIP WPA-PSK; WPA2-PSK Infrastructure
ZyXEL_NBG-419N 40-4A-03-01-A5-62 39% 1 AES WPA2-PSK Infrastructure
MHWireless01 1C-7E-E5-40-6F-2E 15% 1 TKIP; AES WPA-PSK; WPA2-PSK Infrastructure
burninroom 90-94-E4-37-F8-DE 55% 1 WEP Unknown Infrastructure
SUDER CC-5D-4E-30-06-37 5% 1 AES WPA2-PSK Infrastructure
CES-GROUP 34-08-04-D0-3E-EE 0% 1 TKIP; AES WPA-PSK; WPA2-PSK Infrastructure
Apple Network 5bc8ab 00-11-24-5B-C8-AB 29% 6 Not Use OPEN Infrastructure
TP-LINK_A5996A B0-48-7A-A5-99-6A 44% 9 TKIP; AES WPA-PSK; WPA2-PSK Infrastructure
qatest 00-16-01-27-8C-B1 39% 10 WEP Unknown Infrastructure
TP-LINK_A5996A2 00-90-CC-E1-BB-D5 50% 11 TKIP; AES WPA-PSK; WPA2-PSK Infrastructure
KalatechRD 00-50-7F-50-E7-80 0% 11 TKIP WPA-PSK Infrastructure
00-0A-79-F5-37-C0 10% 11 WEP Unknown Infrastructure
ALEX1111 00-0A-79-F5-48-BC 55% 11 AES WPA2-PSK Infrastructure
P874 50-67-F0-13-45-5E 24% 6 TKIP WPA-PSK Infrastructure
24-DB-AC-A9-DC-A9 0% 11 TKIP; AES WPA-PSK; WPA2-PSK Infrastructure
EDIMAX_BR-6424N-V2 00-1F-1F-47-89-08 34% 5 TKIP; AES WPA-PSK; WPA2-PSK Infrastructure
JackPrivate 00-0A-79-DB-2E-B6 39% 11 TKIP WPA-PSK Infrastructure
Connected <--> TP-LINK_A5996A
Rescan
Add Profile
Profile List
Profile SSID Channel Authentication Encryption Network Type
PROF001 Connect!! TP-LINK_A5996A 9 WPA2-PSK TKIP Infrastructure
Delete
Edit
Activate

Add WiFi Router into " Profile list " :

Step 1: Select the Router you prefer to use , and click "Add Profile "

00-16-01-27-8C-B1 39% 10 WEP Unknown Infrastructure
TP-LINK_A5996A2 00-90-CC-E1-BB-D5 50% 11 TKIP; AES WPA-PSK; WPA2-PSK Infrastructure
KalatechRD 00-50-7F-50-E7-80 0% 11 TKIP WPA-PSK Infrastructure
00-0A-79-F5-37-C0 10% 11 WEP Unknown Infrastructure
ALEX1111 00-0A-79-F5-48-BC 55% 11 AES WPA2-PSK Infrastructure
P874 50-67-F0-13-45-5E 24% 6 TKIP WPA-PSK Infrastructure
24-DB-AC-A9-DC-A9 0% 11 TKIP; AES WPA-PSK; WPA2-PSK Infrastructure
EDIMAX_BR-6424N-V2 00-1F-1F-47-89-08 34% 5 TKIP; AES WPA-PSK; WPA2-PSK Infrastructure
JackPrivate 00-0A-79-DB-2E-B6 39% 11 TKIP WPA-PSK
Connected <--> TP-LINK_A5996A
Rescan
Add Profile
Profile List
Profile SSID Channel Authentication Encryption Network Type
PROF001 Connect!! TP-LINK_A5996A 9 WPA2-PSK TKIP Infrastructure
Delete
Edit
Activate

Step 2 : 9858 will auto get the most information of your router and you just need to type the password to connect with the WiFi router then click " Apply "

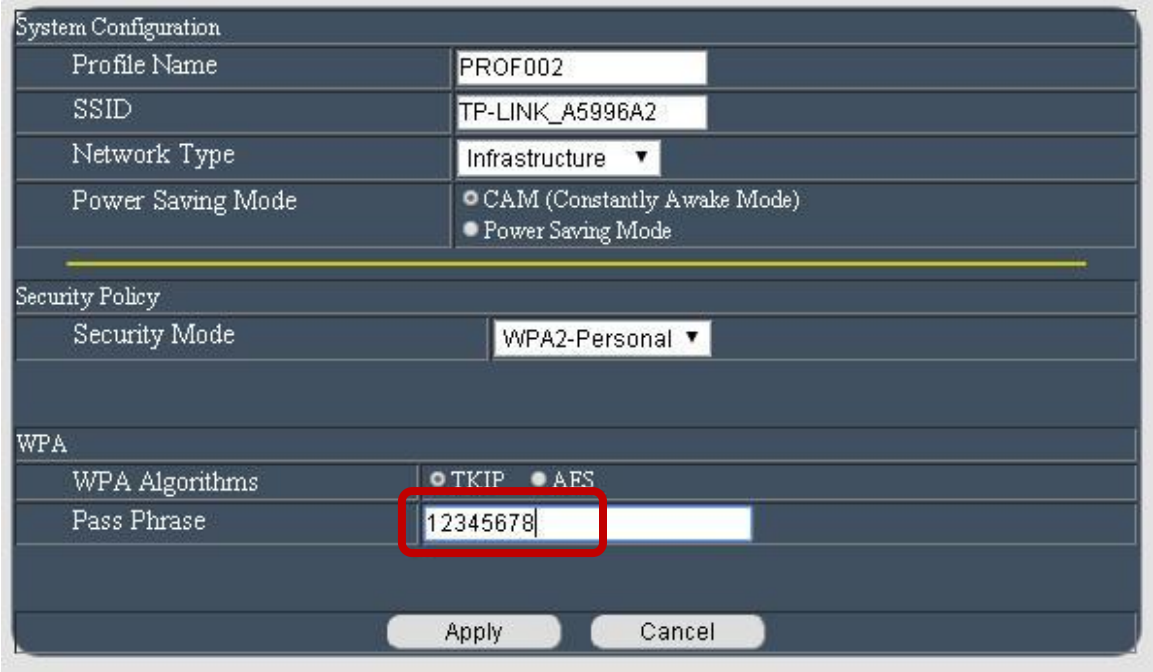

Then you will see the Router name add in to "Profile list "

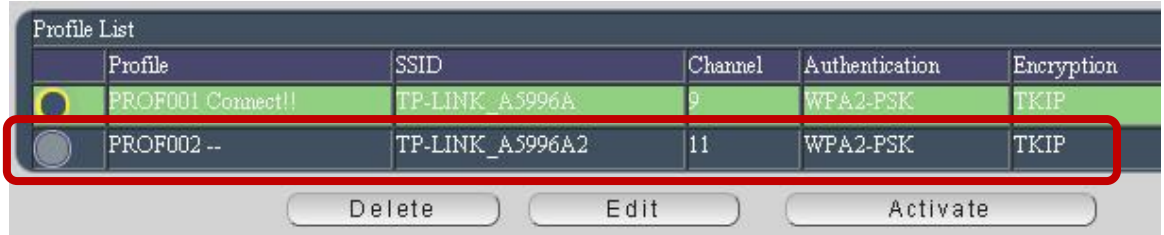

Connect 9858 to this add Router : Active the WiFi Router in " Profile list "

Please select the router an click "Active " to make connection with 9858 .

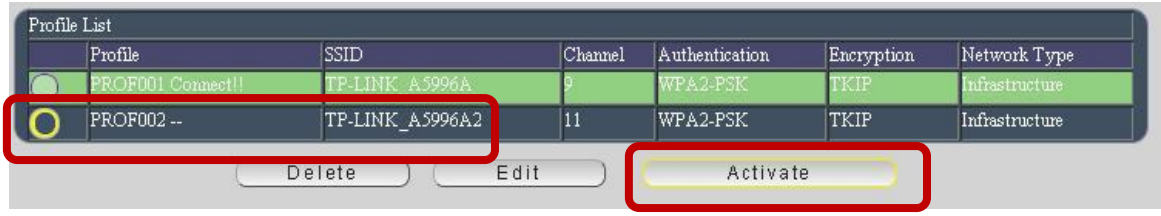

Step 4 : After Active successful , you will see the IP information in " Connection Status " of WiFi Info. Please check if the " Local IP Address " of WiFi Info is under same Segment # with your PC.

Notice :
Segment : The first 9 digits of the IP Address .
EX: The IP of your PC is 192.168.100.122. If the " Local IP Address " at WiFi Info is 192.168.100. x (X can the value of 1~252) , your PC can get into the webpage of 9858 .

Please press "Rescan " to search the router near by again if can not see your router in the list.

Delete the Router in " Profile list " :

Please select the router and click " Delete " to remove this router from " Profile list "

Note : Delete the Router form Profile list , do not affect the connection of WiFi.

WPS (WiFi Protection Service)

To connect IP Power 9858 with WiFi router by WPS function . **Please check if the router supports WPS function fist .**

There is 3 way to setup by WPS : There are 3 ways to setup WPS: Manual hardware setting connection or webpage application
The following information is for apply WPS by webpage control – without WiFi Router nearby .

- By the Reset Button on 9858 and the WPS button on WiFi AP (Router)

Please refer the setup procedure in page #13 .

- By Enrollee of 9858 webpage and WPS button on WiFi AP (Router)

Step 1 : Select the WiFi AP (Router) you want to connect .

Step 2 : Select Mode "Enrollee " then the page will refresh and get the PIN number automatically

Step 3 : Press " PBC Connect Start " , then there is one short beep sound comes out .

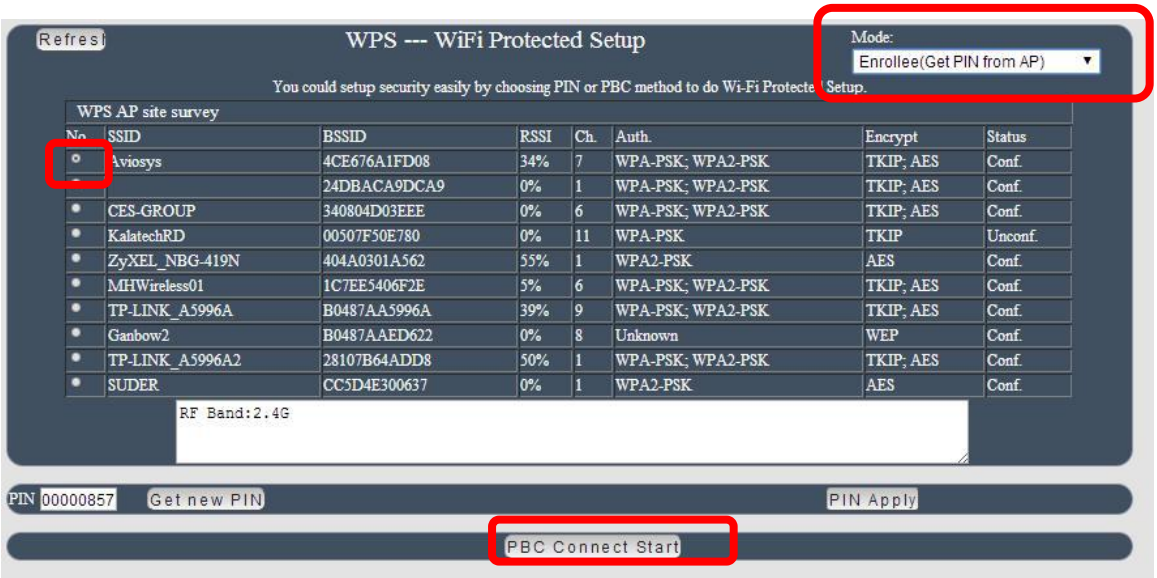
Refresh
WPS --- WiFi Protected Setup
Mode:
Enrollee(Get PIN from AP)
You could setup security easily by choosing PIN or PBC method to do Wi-Fi Protected Setup.
WPS AP site survey
No. SSID BSSID RSSI Ch. Auth. Encrypt Status
Aviosys 4CE676A1FD08 34% 7 WPA-PSK; WPA2-PSK TKIP; AES Conf.
24DBACA9DCA9 0% 1 WPA-PSK; WPA2-PSK TKIP; AES Conf.
CES-GROUP 340804D03EEE 0% 6 WPA-PSK; WPA2-PSK TKIP; AES Conf.
KalatechRD 00507F50E780 0% 11 WPA-PSK TKIP Unconf.
ZyXEL_NBG-419N 404A0301A562 55% 1 WPA2-PSK AES Conf.
MHWireless01 1C7EE5406F2E 5% 6 WPA-PSK; WPA2-PSK TKIP; AES Conf.
TP-LINK_A5996A B0487AA5996A 39% 9 WPA-PSK; WPA2-PSK TKIP; AES Conf.
Ganbow2 B0487AAED622 0% 8 Unknown WEP Conf.
TP-LINK_A5996A2 28107B64ADD8 50% 1 WPA-PSK; WPA2-PSK TKIP; AES Conf.
SUDER CC5D4E300637 0% 1 WPA2-PSK AES Conf.
RF Band:2.4G
PIN 00000857
Get new PIN
PIN Apply
PBC Connect Start

Step 4 : Press the WPS buttons of WiFi AP (Router) soon in few seconds

Step 5: After few seconds , there are short 2 beeps which means WPS connection successfully.

There are messages updated during the configuration in " WPS status " section :
As WPS connection successfully , there is "Configured " message .

If user does not press the WPS function of selected AP (WiFi Router)

SCAN AP → ……→ PCB: NO AP → (one Long Beep) No Used

Which means the WPS connection fail and there is one long beep mean the connection fail. Please try again.)

Step: 6 : User can see the WPS connection in section " WiFi Info " & " WiFi Survey " of Network In " WiFi Survey "

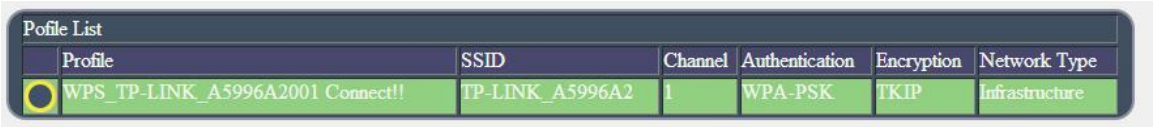

-By Registrar

Step 1 : Select the router user want to connect .

Step 2 : Select "Registrar " and Type the PIN number supply by user WiFi AP (Router) into Pin area and then press button "Pin Start " then user will see "Configured " in WPS status as connect successfully.
Step 3: User can see the WPS connection in section " WiFi Info " & " WiFi Survey " of Network

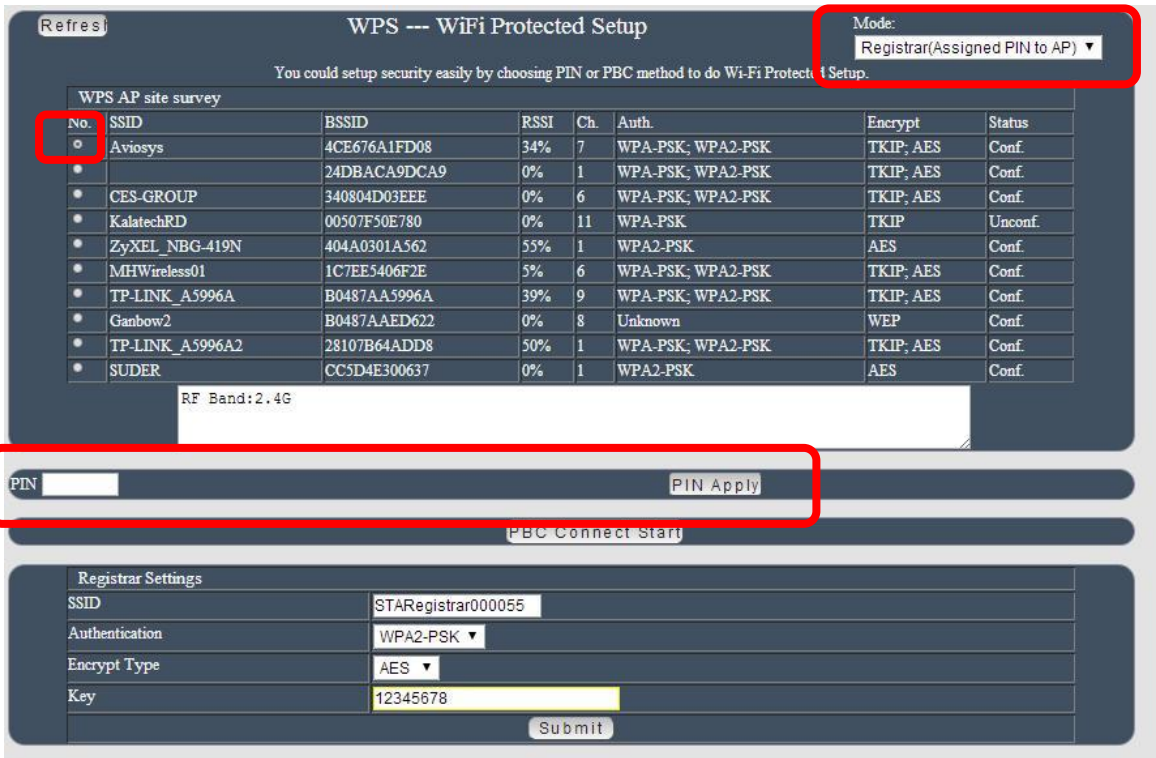

Application Settings

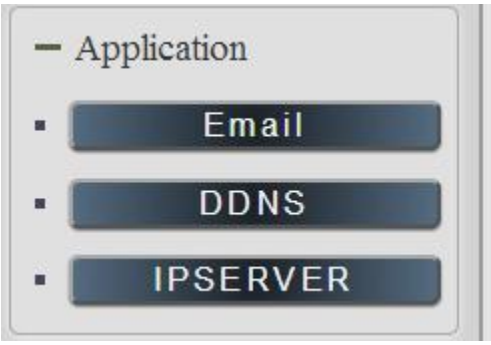

Email

There are 2 sections in this part -- E-mail setting and POP3 Control :

- Email Setting :

User can get e-mail advice as one of the following situation happen :

- Receive E-mail with IP information & MAC Address as 9858 device boot up.
- Receive E-mail as ON/OFF status change in each output .

Notice : To send out the e-mail successfully , please double check the setting of user DNS . (Network → DNS setting)

The 9858 allows user to send from public e-mail account , such as @gmail or @hotmail or @yahoo.com

- **SMTP Server**: This is the mail server of sender .

If user select @gmail or @hotmail account as SMTP Server , 9858 will fill the SSL & Port automatically

- **Port :** This is the port of SMTP Server. Most common port to send out e-mail is port 25
- **User** : Login for the e-mail address . Ex: 9858@gmail.com
- **Password**: Password for the e-mail address. EX : 12345678
- **From :** Mail sender address to send the E-Mail out . Ex: 9858@gmail.com
- **To** : Mail receiver address to get the E-Mail in Ex: 9223@hotmail.com

- E-mail test : Can help to check if the e-mail setting works.

- Apply : To store the setting in this section .

DDNS

The DDNS section allows user to setup the 9858 with a DDNS server (i.e. www.dyndns.com). After the server has been setup correctly, enter the necessary information into the 9858 DDNS settings.

Note : The DNS server will have extra change as apply new account.

Account : the Username / account name of DDNS account
Password : the Password of DDNS account
DDNS : The DDNS name user apply . Ex: abc.dyndns.org

For Example :

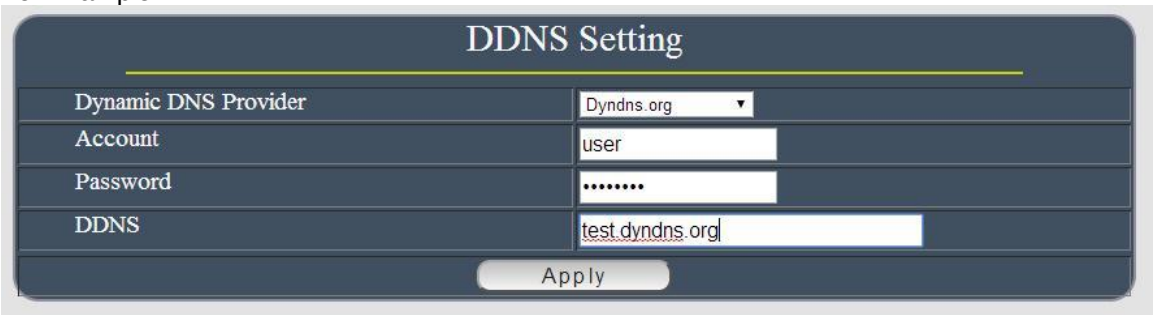

IP SERVER

In this section , user can setup IP Server & CNT (Cross Network Technology) ,

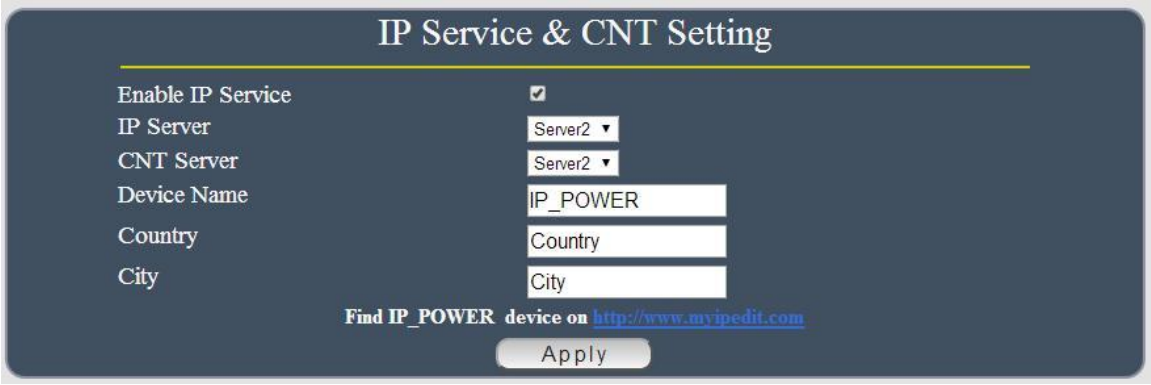

IP Server & CNT Setting :

The IP SERVER allow 9858 to be easily accessed on the internet by our IP Power Center or IP EDIT. With this feature anyone can find there device with no problems.

IP Server: Allows user can find user of 9858 on the internet without having to remember long IP Addresses. Instead user can just remember the name of user device.

- Enable IP Server : Enable or Disable this function click .
- IP Server & CNT Server : For easily setting , please select same server number for the 2 part.

User can search the 9858 by Device name , Country or City.

This allows the device to easily be accessed on the Internet, user no longer have to Port Forwarding , user device to be able to use it. Only some devices are CNT compatible.

Please refer page #24 for the function of IP Server

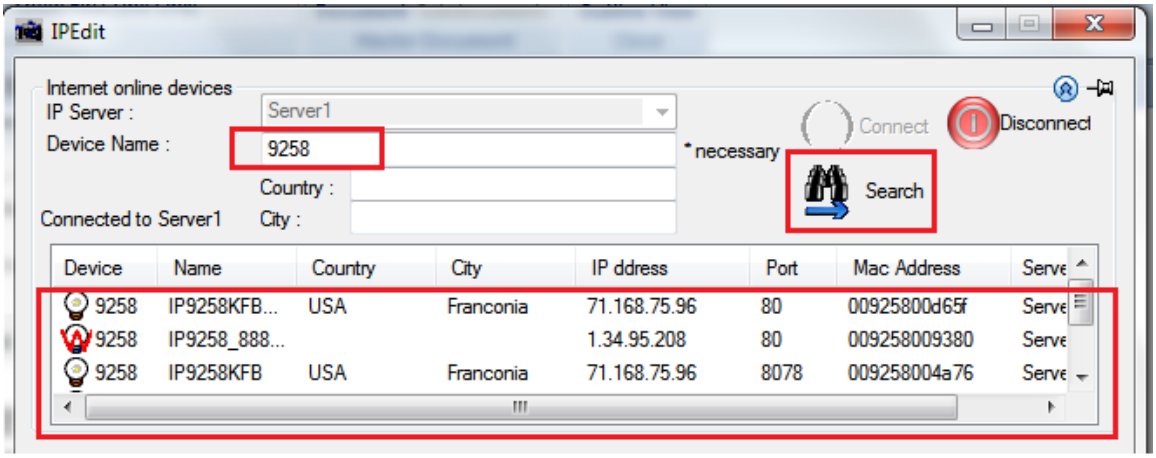

System Setting

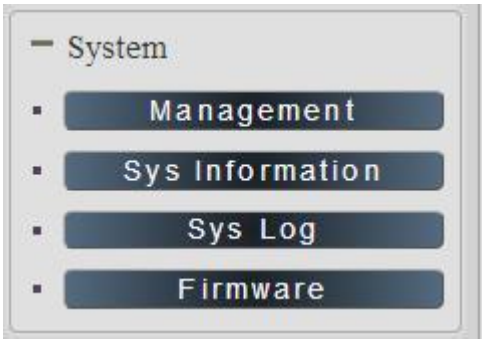

Management

In this section there are several setting :
Administrator setting, Host Connection Interval , NTP setting , Backup Setting , Load Factory Default , Restart System

The message show :

" You may configure administrator account and password, NTP settings here, Save system settings by exporting them to a configuration file, restore them by importing the file" or reset them to factory default

---

Administrator setting

The User Management section allows user to create users that will be able to access user device. There are two main types of users:

System Management
You may configure administrator account and password, NTP settings settings here, Save system settings by exporting them to a configuration file, restore them by importing the file, or reset them to factory default
Adminstrator Settings
Account
admin
Password
Authority :
Admin
Operator
Viewer
Apply

There are three Authorities in 9858. The account name and password can be changed by user , but each Authorities only support one Account name & one password.

Administrator: The *Administrator* has the authority to create other users, remove users, and control the device. 9858 will ask to log in again if change the Default Setting here.

Operator : The operator can only control the setting of " IO Control " section but can not see other page of 9858 .

Viewer: The viewer can only see the " IO Control " section , but can not see other page of 9858.

Default Setting of the Authorities :

Authority	Account name	Password
Admin	Admin	12345678
Operator	user	user
Viewer	guest	guest
Note	Please amend the password as number or English character from 1 to 8 characters. **Do not use special symbol like " " ; : ~ ! @ # $ % ^ & * ( )**	

Please click "Apply " button after change the account name / password

Host Connection Interval

The setting is for user to control the 9858 response time for IO sensor like ????? the time of speed , timeline update . Default 1000ms (= 1 second)

The higher range you set up , the response time will be slower

NTP setting

In this section , user can setup the date , time and NTP server to get the time synchronization .

NTP synchronization : User can setup the time gap (1~300 hours) for 9858 to check the time with the NET server .

Backup Setting & Restore Setting

User can export the setting of 9858 into a " DAT " format .
It will save most the setting in 9858 .

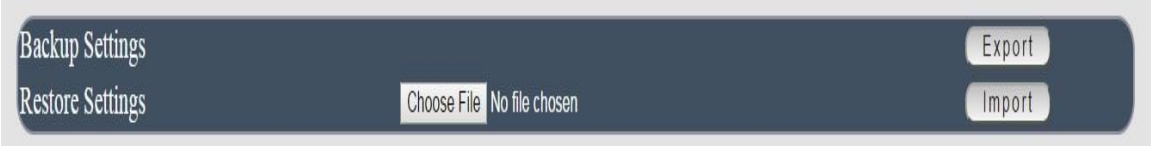

User can import the file which is exported from 9858 as " DAT " format .
It will help user to setup many 9858 device in a short time.

As press " Import ", there is caution message show as following :

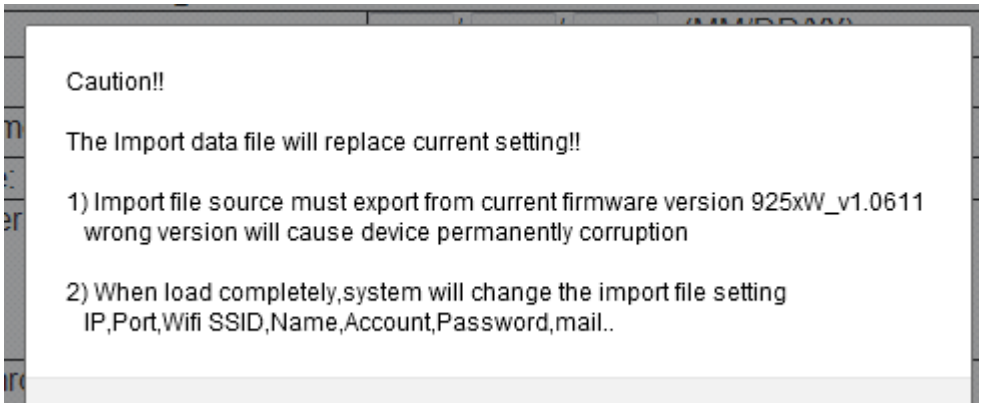
Caution!!
The Import data file will replace current setting!!
1) Import file source must export from current firmware version 925xW_v1.0611
wrong version will cause device permanently corruption
2) When load completely,system will change the import file setting
IP,Port,Wifi SSID,Name,Account,Password,mail..

Before click " Ok " to import , please do read following notice :

- Do NOT import DAT file which is not export form 9858. The warranty will be invalided if any wrongdoing from " Import " .
- Please do Import the file in LAN / Ethernet . To avoid Import fail , please do not Import file via Internet

Load Factory Default & Restart System

In this 2 section , user can click one button to set back the setting to default or restart the 9858 without device nearby user side.

Note : The factory default setting of 9858 IP is assigned by DHCP. It will change the IP if load factory defaults .

System Information

In this section , user can get the system information and change own Language display in 9858 webpage in “ Language Setting “ :

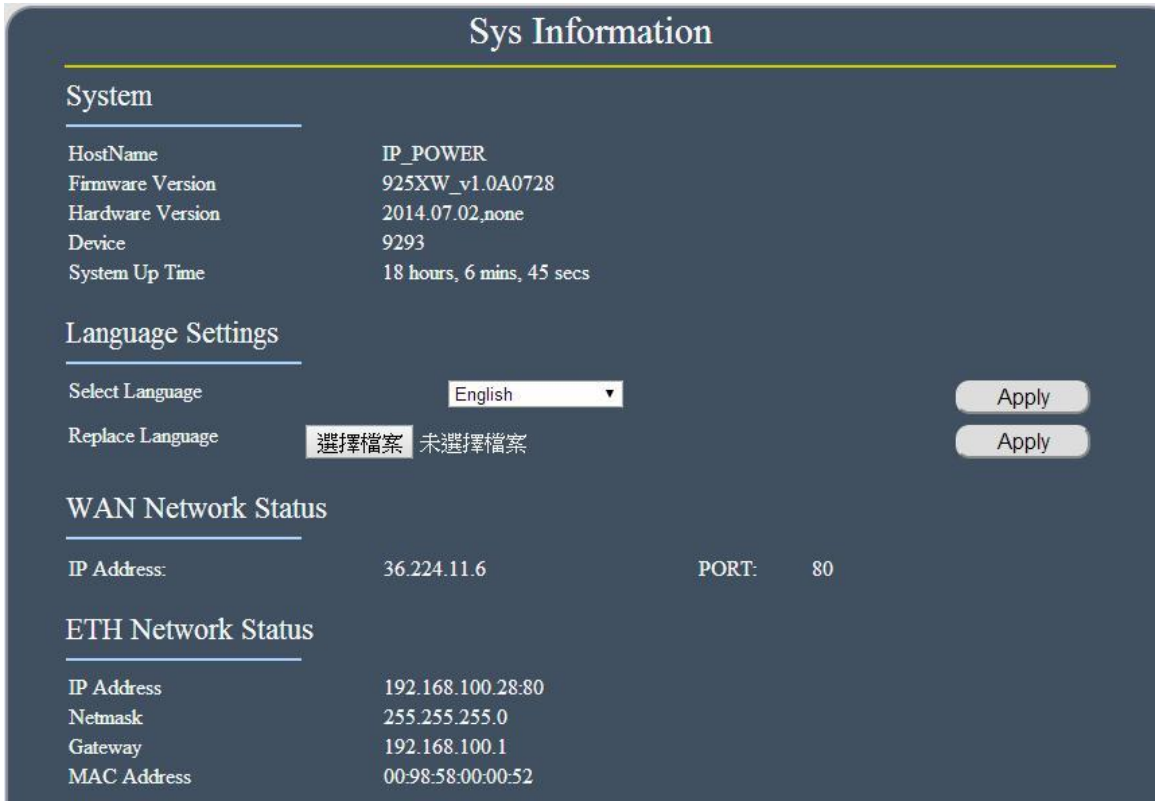

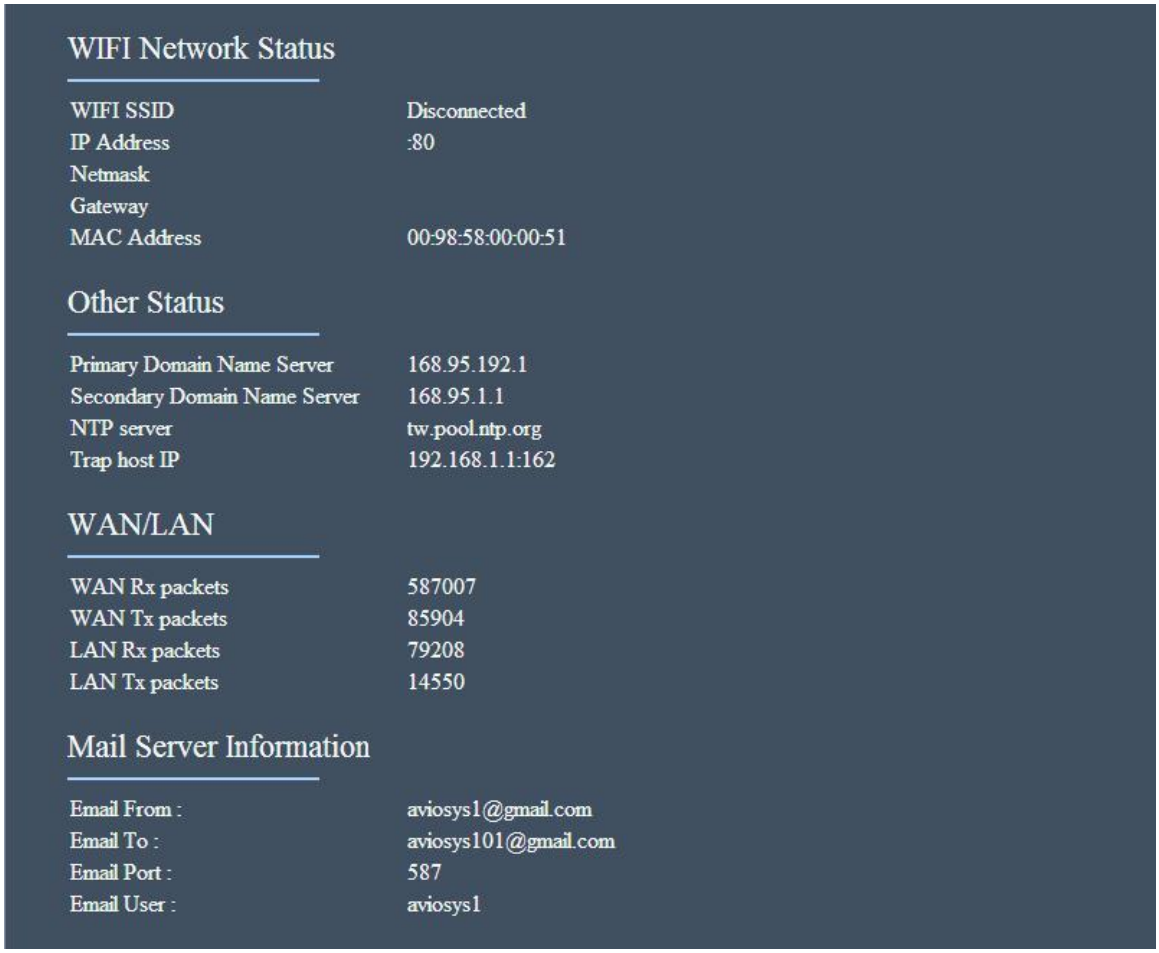

- Language Setting :

lan
User can change the display Language - two customize Language and build own Language by simple procedure . Please refer the following two procedures : Change the text in SDK & Language Customize procedure .

A. Change the Text in SDK :

A-1 . Please download the SDK file in our CD first . There are 5 files as " XML document" format . The files names are "apps " , "control", "internet " , "menul" & "admin" . Each file text are different .

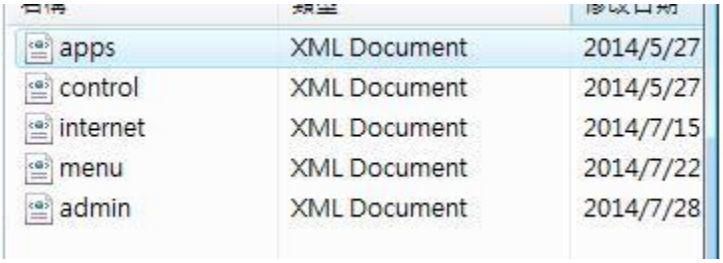

A-2 . Open the 5 files by WordPad / NotePad - Windows embedded software

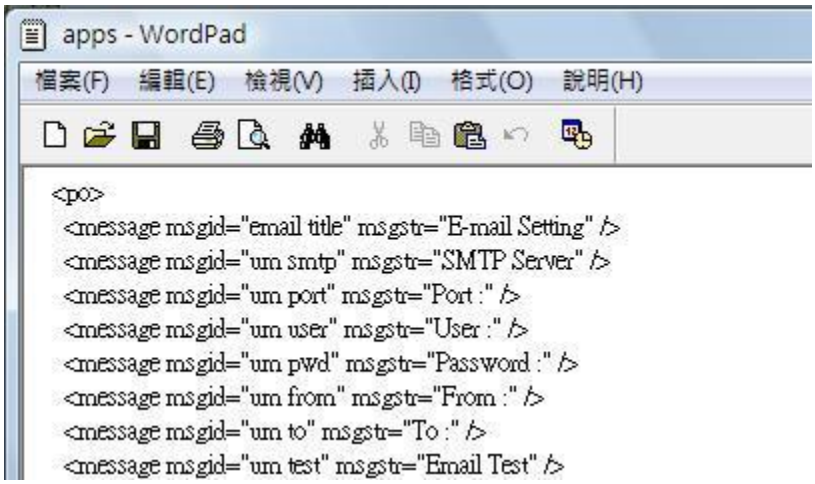

A-3. Change the Texts between the two " marks after " msgstr " – see screenshot below

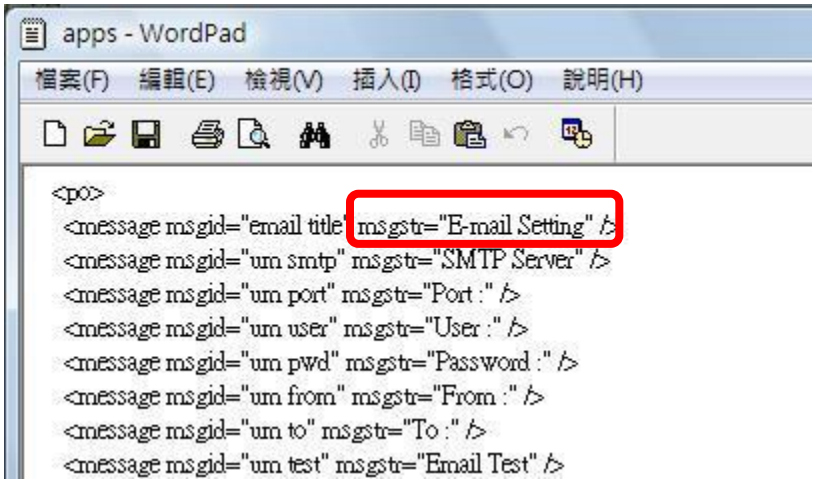

Example:
<message msgid="email title" msgstr="E-mail Setting" />

The webpage will display the Text in yellow background as above example

Notice :

To avoid any update problem , please ONLY change the Texts between the two " marks after msgstr .

A-4. Save the files after change . Then refer update procedure as following :

B. Language Customize procedure :

B-1. Please go to System → Information → Language setting.
Change the “Select Language “ as “Other 1”
And click “ Apply “

Notice :

There are 5 languages setting in this section :

- ENG : Can’t change
- Chinese : Can’t change
- Simple Chinese : Can’t change
- Other 1 : Can revise as user’s own Language
- Other 2 : Can revise as user’s own Language

Only “Other 1” & “Other 2 “ are for customize Language . The other 3 Language are fixed and can not be revised.

B -2 . After change the Language as Other 1 , the webpage will go to control page directly

B-3. Please go back to System → Information → Language setting→ Replace Language section .
Press the “ Choose file “ button in yellow line area

B-4. Select the 5 files you had revised the Texts and click “open “ .

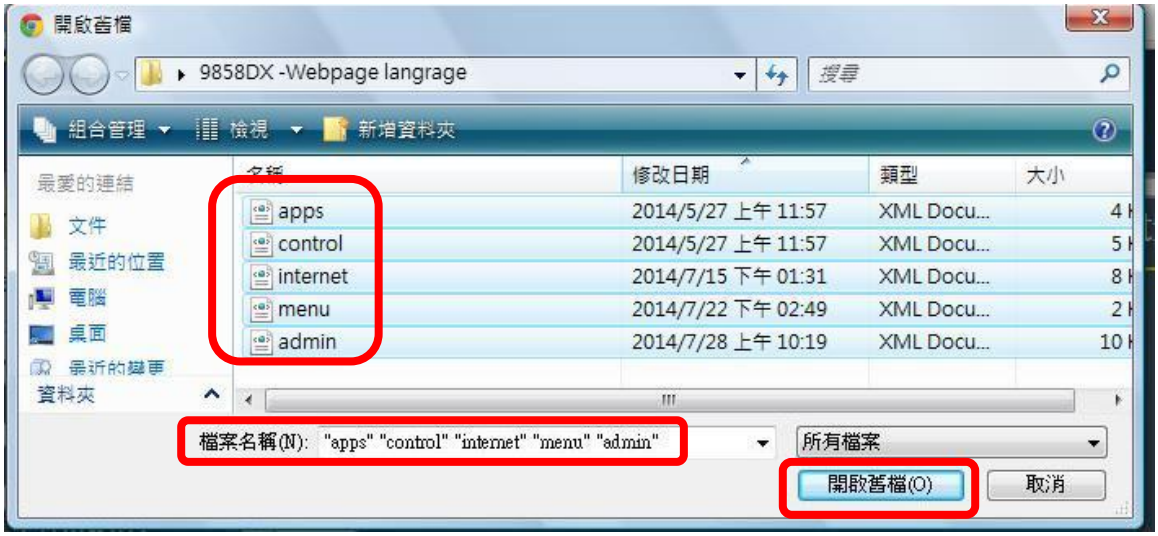

B- 5. Then the webpage will show that you have selected 5 files . Press “Apply “ to execute the update procedure

B- 6 . Then the webpage will display “ user select 5 files “ to update. Press “ Apply “ to execute the replacement .



After update completed , it shows message “ Upload 5 files , 25880 bytes “ as above means the update successfully .

Notice : Please update all the 5 files together.

System Log

In this section , user can get the 9858 system operation information. **The system information will be deleted after 9858 device power reboot.**

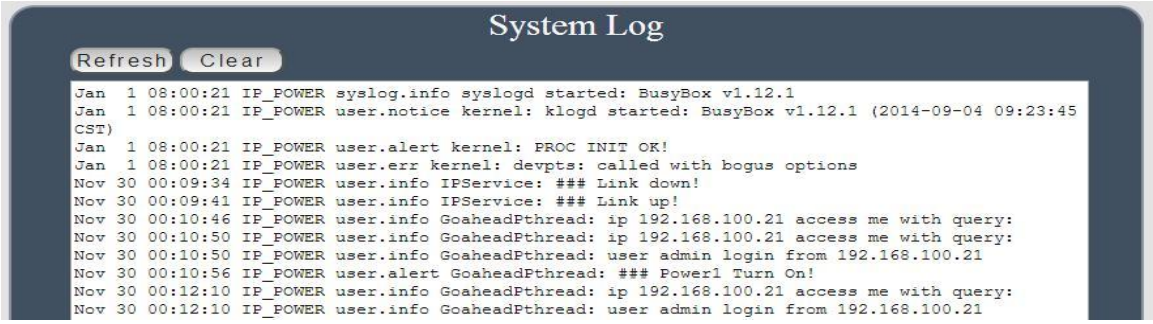
System Log
Refresh
Clear
Jan 1 08:00:21 IP_POWER syslog.info syslogd started: BusyBox v1.12.1
Jan 1 08:00:21 IP_POWER user.notice kernel: klogd started: BusyBox v1.12.1 (2014-09-04 09:23:45 CST)
Jan 1 08:00:21 IP_POWER user.alert kernel: PROC INIT OK!
Jan 1 08:00:21 IP_POWER user.err kernel: devpts: called with bogus options
Nov 30 00:09:34 IP_POWER user.info IPService: ### Link down!
Nov 30 00:09:41 IP_POWER user.info IPService: ### Link up!
Nov 30 00:10:46 IP_POWER user.info GoaheadPthread: ip 192.168.100.21 access me with query:
Nov 30 00:10:50 IP_POWER user.info GoaheadPthread: ip 192.168.100.21 access me with query:
Nov 30 00:10:50 IP_POWER user.info GoaheadPthread: user admin login from 192.168.100.21
Nov 30 00:10:56 IP_POWER user.alert GoaheadPthread: ### Power1 Turn On!
Nov 30 00:12:10 IP_POWER user.info GoaheadPthread: ip 192.168.100.21 access me with query:
Nov 30 00:12:10 IP_POWER user.info GoaheadPthread: user admin login from 192.168.100.21

Firmware

The firmware update function only support in LAN connection . NOT support under WiFi connection . Before update , please DO READ THE MESSAGE BLOW :

It takes about 1 minute to upload upgrade flash and be patient please. Caution!
A corrupted image will hang up the system.

To update the 9858 , please follow the instruction below to prevent anything happens like **update incomplete** or **hardware disable** which may be caused by wrongdoing of updating :

1) Turn off all chat programs including (Skype, FB. QQ, AIM, Yahoo messenger ….etc.)
2) Check to make sure that all devices are turned on safely and powered
3) While updating do not turn off the power
4) Make sure that the cable is connected firmly
5) Do not interrupt the update process, the update must be completely finished .
6) Turn off, any Spyware or antivirus software which may conflict with the update.
7) Update firmware in the Local Area Network (LAN)
8) Support update under 32bit Web Browser (32 bit version only) like IE, Google Chrome, Firefox . **Do not use browser at 64 bit version**
9) Please change the PORT as 80
10) **Reboot and Do the Hardware Reset** (keep pressing RESET button for 10secs) after update successfully.
11) **Clear the Cookies** to avoid get the old webpage .

Please also update the notice in webpage before update :

Upgrade Firmware
Upgrade Wifi IP Power firmware to obtain new functionality.
It takes about 1 minute to upload upgrade flash and be patient please. Caution! A corrupted image will hang up the system.
Firmware Ver: 925XW2_v2.03110446
Location:
選擇檔案
未選擇檔案
Apply

Controlling the Device

CGI HTTP Commands

CGI Commands allow you to easily integrate the 9858 with other systems and programs. Please read the instructions carefully on how to use the Http:// Commands

To use http:// Commands open up a web browser and type in the command that you would like to use.

1. User authorization .There are 3 formats :
For example : IP address 192.168.1.18 ， Username : admin. Password : 12345678

1.1 http://admin:12345678@192.168.1.18/set.cmd?cmd=getpower
1.2 http://192.168.1.18/set.cmd?user=admin+pass=12345678+cmd=getpower
The above 2 way also for HTTPS

2. Command
set.cmd?cmd=
All command do not separate capital / lower case , the connect symbol between commands can be “+” , “&” and “?” .

2.1 To get firmware version : getversion
http://192.168.1.18/set.cmd?cmd=getversion

System return :
CGI Command : Data follows
Version=9258W_N_v1.0.0.1

2.2 To get MACaddress：getmac
http://192.168.1.18/set.cmd?cmd=getmac

System return：
CGI Command : Data follows
mac=00929000008F

2.3 To get the status of power on/ off： getpower
http://192.168.1.18/set.cmd?cmd=getpower

System return：
CGI Command : Data follows
p61=0, p62=0, p63=0, p64=0
P61 to P64 means : POWER1 to POWER4

2.4 To set the power on / off ： setpower&p6x=0 or 1
p6x=0 means off，p6x=1means ON，x can be 1 to 4 (power1 to power 4)

Example : Turn on POWER1 and POWER2 and turn off POWER3：
http://192.168.1.18/set.cmd?cmd=setpower&p61=1&p62=1&p63=0
System return：
CGI Command : Data follows
p61=1,p62=1,p63=0

2.5 Setup power to reboot as RESET： setpowercycle& p6x=delayTime
X can be 1to 4 (power 1 to power 4) ， ； dealyTime mean the time (second) waiting for reset

For example :
http://192.168.1.18/set.cmd?cmd=setpowercycle &p61=5&p62=2&p63=4

System return：
CGI Command : Data follows
p61 cycle ok,p62 cycle ok,p63 cycle ok

Telnet Control

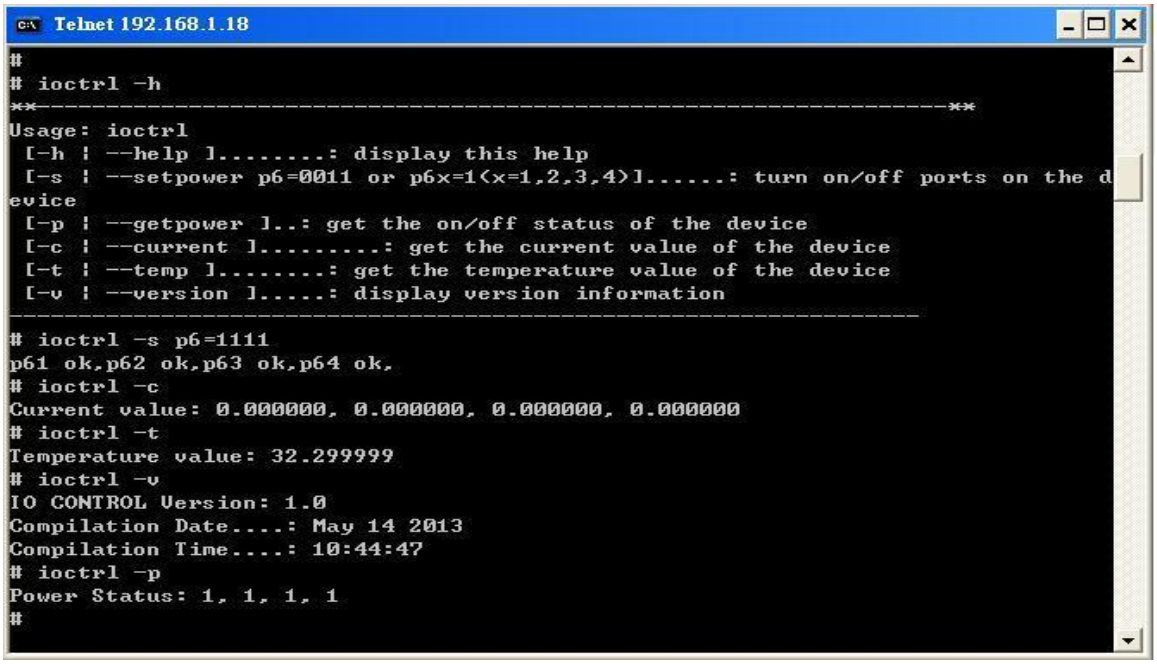
Telnet 192.168.1.18
#
ioctrl -h
--
Usage: ioctrl
[-h | --help].....: display this help
[-s | --setpower p6=0011 or p6x=1(x=1,2,3,4)].....: turn on/off ports on the d
evice
[-p | --getpower]..: get the on/off status of the device
[-c | --current].....: get the current value of the device
[-t | --temp].....: get the temperature value of the device
[-v | --version].....: display version information
----
ioctrl -s p6=1111
p61 ok,p62 ok,p63 ok,p64 ok,
ioctrl -c
Current value: 0.000000, 0.000000, 0.000000, 0.000000
ioctrl -t
Temperature value: 32.299999
ioctrl -v
IO CONTROL Version: 1.0
Compilation Date....: May 14 2013
Compilation Time....: 10:44:47
ioctrl -p
Power Status: 1, 1, 1, 1
#

Notice: The command " –C " & "-T " are for models 9858 only .

FAQ :

Q1: Why can I see 2 IP address on IPEDIT.exe but can only reach one ?
Why did IPEIDT.exe show the LAN IP address as no network cable connect ?
Why did IPEDIT.exe show the WIFI IP address as no WIFI router available ?

Ans.: 9858 will remember the LAN / WAN setting one connect .Please select the IP you can log into 9858 to operate.

There is no problem if connect both LAN and WAN

But the Gateway Setting will affect as working on Internet and also sending / receiving e- mail . User must select the correct Gateway as need to get into 9858 on Internet

Q2 : Why can`t I see my 9858 after arrange the port forwarding in my router?

Ans. : Please make sure the Network Type (Gateway) is correct - LAN or WAN .

Q3 : Why can`t I receive e-mail ?

Ans.: Please check the setting first and then make sure the DNS is correct (Check your router or ask your ISP company) .There is a test button for checking the setting success or fail to send e-mail.

Q4: Why can`t I get the IP in IPEDIT by LAN after delete WiFi profile or lost WiFi AP connection ?

Ans.: If the WiFi connection for 9858 lost or the WiFi AP router damage,
9858 can't get the WiFi IP then it will change it`s IP to fixed IP address as **192.168.1.168** .

User can't see the IP by IPEDIT as the Network type is still at WiFi .

There will have 2 ways re-log in 9858 -- by WiFI and by LAN . :

BY WiFi connection : Please reboot 9858 and Re-connect 9858 with new WiFi router by " WPS " button (can do this way without 9258 W2 power reboot)

BY LAN connection :

Please refer following step :

Step1: **Please connect 9858 to your PC directly** and change the IP address of your PC as 192.168.1.xxx (set the IP of your PC to be the same segment of 9858 .)
xxx can be 1~255 but not 168 .

Step 2 : After log in to the 9858 in LAN, please go to Network → Setting → Default Network Type setting to change the Network type from " WiFi " to " LAN " and click "Apply" .

The NETWORK TYPE is the door for Internet connection , E-mail , DHCP UPNP NET Server . Please select correct TYPE LAN or WAN for the user to log in 9858 form Internet and use above functions .

Notice :
Under DHCP mode - either select LAN or WiFi connection, 9858 will get the Network type (Gateway) information automatically. But if under Static mode , please do fill up the correct Network type (gateway) . As choose WiFi connection , the Network type (gateway) of LAN will be empty automatically.

Step 3 : Connect your PC and 9858 to a router by LAN. Then **reboot 9858 (MUST DO)** . After 45 seconds with a long beep sound , you can find the LAN IP of 9858 by IPEIDT.exe

Q5: How can I reset to default:

Ans : Keep pressing the button of “RESET for 5 seconds at least

To reset to original manufacture settings : press the reset button with a sharpen pin for 5- 6 seconds then RELEASE. There will be 3 beeps sound which means reset start and 9858 will be rebooted itself -there is one beep after reboot) and most information go back to default setting (LAN IP).